



Owner's Manual and Assembly Instructions

Model # 368200 & 368000

STOP!

****U.S. and Canada customers ONLY****
IF ASSISTANCE IS NEEDED,

STOP!

DO NOT CONTACT THE STORE!

CALL OUR CUSTOMER SERVICE DEPARTMENT at 1 (800) 225-3865

HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday (Mountain Standard Time)

Call or visit our Web site at www.lifetime.com for Saturday hours

****For customers outside the U.S. or Canada, please contact the store for assistance.****



Lifetime Products, Inc.
PO Box 160010 • Freeport Center, Bldg. D-11
Clearfield, Utah 84016-0010

***This product is intended for use by children ages 3 to 12
and is for residential use only.***

STOP!

Before Beginning Assembly!

STOP!

Do not start assembly until you have read all instructions.

Tools Required for Assembly

1/2" wrench
3/4" wrench
Phillips Screwdriver
Power Drill
Drill Bit 3/8"

Drill Bit 1/4"
12' Step Ladder (not extension ladder)
Hammer
3/16" and 1/4" Allen wrench (included)

The Person Symbol indicates the number of adults required to complete the assembly step.



Two Adults Required for Assembly



Three Adults Required for Assembly



Four Adults Required for Assembly

Only adults should set up the play equipment. Do not allow children in the setup area until assembly is complete.

Save this owner's manual for future reference and in the event that the manufacturer has to be contacted.



WARNING



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID THE WARRANTY.

To ensure safety, do not attempt to assemble this playset without following the instructions carefully. Before beginning assembly, read the instructions. Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury.

Most injuries are caused by misuse and/or not following instructions. Use caution when using this playset.

****IMPORTANT SAFETY INFORMATION****

PLEASE READ BEFORE BEGINNING ASSEMBLY:

Installation and Ground Preparation Instructions:

- Place the equipment on level, well-drained ground, not less than 6 ft. (1.8 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install home playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user (see page 5).
- Install the playground equipment with the slide facing North, this helps prevent the surface on the slide from getting too hot.
- To prevent serious injury, warn children that they must not use the equipment until properly installed.
- With unstable soil conditions, we recommend anchoring the playset into the ground. Call our Customer Service Department at 1-800-225-3865 for more information.

Operating Instructions:

Observing the following instructions and warnings reduces the likelihood of serious or fatal injury.


- The maximum number of occupants that may safely use the entire playset including all components is eight with a maximum weight of 900 pounds.
- On-site adult supervision should be provided for children of all ages.
- Instruct children not to walk close to, in front of, behind, or between moving items.
- Instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope.
- Instruct children to avoid swinging empty seats.
- Teach children to sit in the center of the swings with their full weight on the seats.
- Instruct children not to use the equipment in a manner other than intended.
- Instruct children not to get off equipment while it is in motion.
- To prevent entanglement and strangulation, dress children appropriately using well-fitting shoes and avoiding ponchos, scarves, jackets with neck drawstrings, helmets with straps, and other loose-fitting clothing that is potentially hazardous while using equipment.
- Instruct children not to climb when the equipment is wet.
- Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.

Maintenance Instructions:

- Check surfacing material and replenish as necessary to maintain proper depth (see page 5).
- Check all nuts and bolts twice monthly during the usage season for tightness and tighten as required. It is particularly important that this procedure be followed at the beginning of each season.
- Remove any tripping hazards, such as exposed concrete footings, tree stumps, or rocks.
- Check all coverings for bolts and sharp edges twice monthly during usage season to be certain they are in place. Replace when necessary. It is especially important to do this at the beginning of each new season.
- Check swing seats, ropes, cables and chains monthly during usage season for evidence of deterioration. Contact Customer Service for replacement parts.
- Sand rusted areas on tubular members and repaint using a non lead-based paint.
- Take plastic swing seats indoors or do not use when the temperature drops below 40 degrees F.
- If the warning sticker is illegible, destroyed or removed, contact Customer Service for a replacement.

Disposal Instructions: Disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the swing set is discarded. Follow all local disposal requirements.

Place the equipment no less than 6 ft. (1.8 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires. Make sure the clearance in front of and behind the swings is at least twice the height of the swing bar. The impact surfacing needs to cover the entire recommended play area. Refer to the example below.

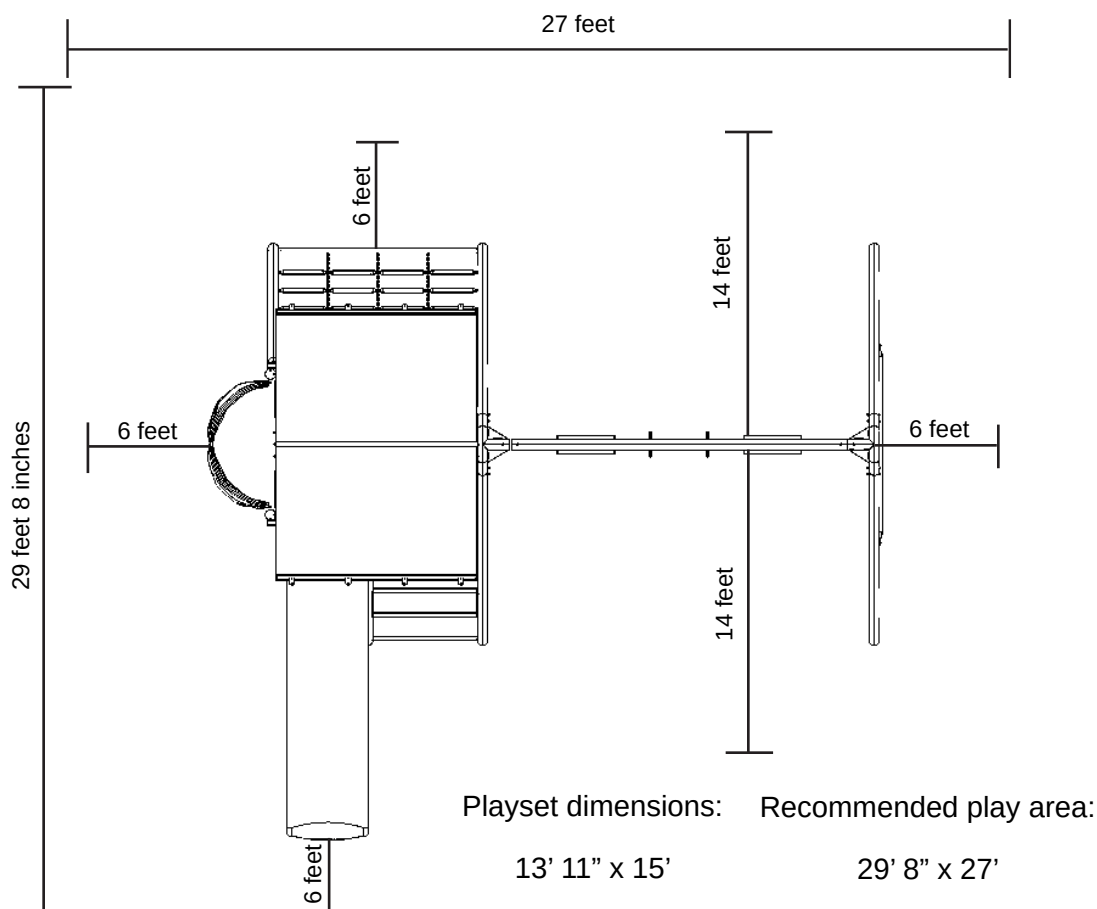

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS*

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury causing potential of a fall. It is self evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces such as concrete or asphalt and while grass may appear to be acceptable, it may quickly turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock-absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table 1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall onto different loose-fill surfacing materials if they are installed and maintained at

depths of 6, 9, and 12 inches. However, it should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used.

It is recommended that a shock-absorbing material should extend a minimum of 6 ft. in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability of the material in your area, and its cost.

Fall Heights for this Unit and Other Accessories. (Compare heights in this table to the heights in the following table. We recommend using 12" of Double Shredded Bark Mulch.)

Clubhouse	3, 5, or 7 feet	Monkey Bars	7 feet 6 inches
Swing Bar	7 feet 6 inches	Climbing Wall	8 feet


TABLE 1 — FALL HEIGHT IN FEET FROM WHICH A LIFE THREATENING HEAD INJURY WOULD NOT BE EXPECTED

Type of Material	Material Depth: 6 in. depth	Material Depth: 9 in. depth	Material Depth: 12 in. depth
Double Shredded Bark Mulch	6 ft (fall height)	10 ft (fall height)	11 ft (fall height)
Wood Chips	6 ft (fall height)	7 ft (fall height)	12 ft (fall height)
Fine Sand	5 ft (fall height)	5 ft (fall height)	9 ft (fall height)
Fine Gravel	6 ft (fall height)	7 ft (fall height)	10 ft (fall height)
Shredded Tires***	10 ft (fall height)	N/A (fall height)	N/A (fall height)

*This information has been extracted from the CPSC publications "Playground Surfacing--Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772.

***This data is from tests conducted by independent testing laboratories on a 6-inch depth of uncompressed shredded tire samples produced by four manufacturers. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

USE AT YOUR OWN RISK!

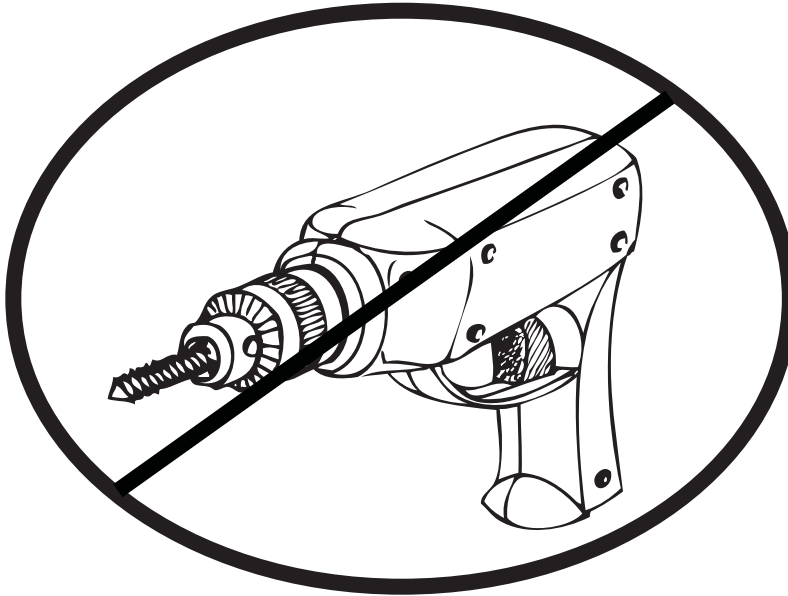

USING A DRILL IS NOT RECOMMENDED FOR DRIVING BOLTS.


***A cordless drill can be used for driving screws;
however, care should be taken not to
over tighten or strip screws.***

If you decide to use a drill for driving bolts, follow the tips to reduce the chance of damaging the product:

1. Always start bolts by hand to prevent cross-threading.
2. Use a drill with the clutch set at the lowest setting that will drive the bolts.
3. Use an Allen wrench for final tightening of bolt to prevent over-tightening.


Parts List (Box 1) Kit Box 321002

ID	Item Description	Qty	✓	Part #				
1A	Rail, One Handle	4	□	8001261	1F	Cargo Net	1	□ 8000727
1B	Rail, Two Handle	2	□	8001206	1G	Binocular	1	□ 8000874
1C	Ladder Rung	2	□	8001263	1H	Binocular Bracket	1	□ 8000349
1D	Belt Swing	2	□	8001497	1I	Steering Wheel	1	□ 8000856
1E	Trapeze Swing	1	□	8000020	1J	Wheel Clicker	1	□ 8000158
					1K	Wheel Cap	1	□ 8000850

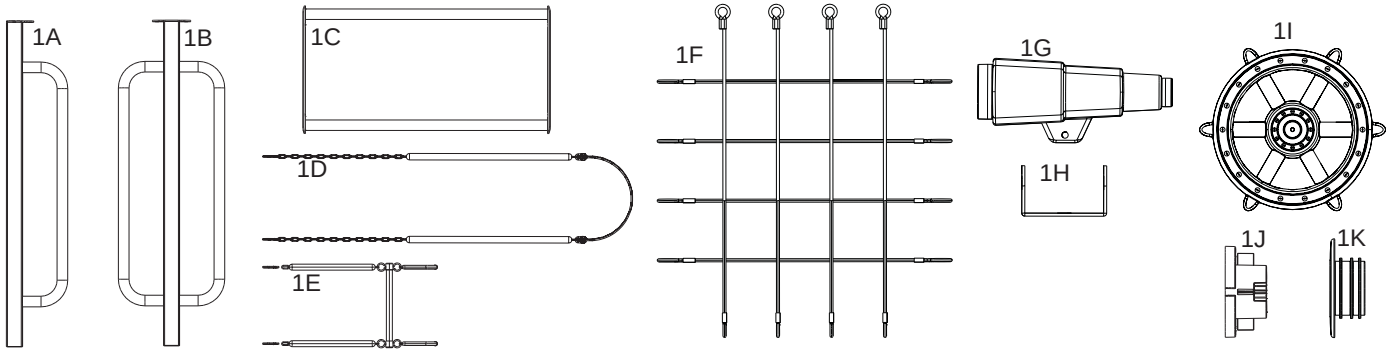


Parts List (Box 2) Kit Box 322003

ID	Item Description	Qty	✓	Part #				
2A	Deck	1	□	8001721	2J	Round Roof Tube	2	□ 8002853
2B	Chalkboard	1	□	8001271	2K	Roof Railing	2	□ 8001291
2C	Deck Support	1	□	8001197	2L	Cargo Net Bottom Pole	1	□ 8002439
2D	45" D-Tube	1	□	8002846	Under-Deck Swing			
2E	41" D-Tube	1	□	8001258	2M	Plastic Seat	3	□ 8001093
2F	Ladder Side D-Tube	1	□	8002843	2N	Square Tubing	3	□ 8001216
2G	44" Turn Bar	1	□	8002541	2O	3-Hole Bracket	1	□ 8001219
2H	Cross Brace	4	□	8000252	2P	6-Hole Bracket	1	□ 8001218
2I	Roof Truss	8	□	8002542	2Q	Soft Grip Chain	3	□ 8000726

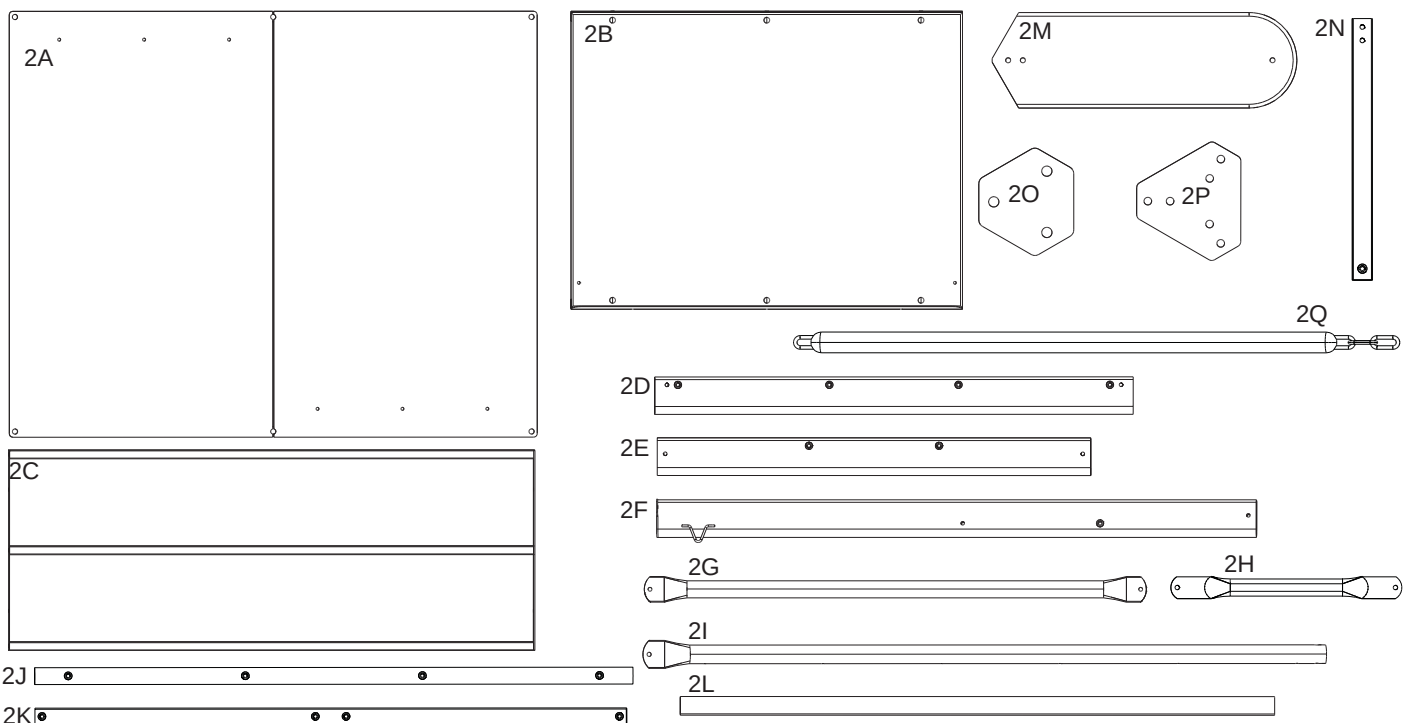


Parts List (Box 3) Box 320002

ID	Item Description	Qty	✓	Part #					
3A	A-Frame Pole	2	☐	8002526	3F	Cargo Side D-Tube	1	☐	8002838
3B	Ladder Side Pole	1	☐	8002849	3G	Right Vertical Pole	1	☐	8001260
3C	Cargo Side Pole	1	☐	8002556	3H	Left Vertical Pole	1	☐	8002621
3D	Angled Ladder Leg	1	☐	8002852	3I	A-Frame Roof Tube	1	☐	8002854
3E	Angled Cargo Net Leg	1	☐	8002537	3J	Climbing Wall Roof Tube	1	☐	8002855
					3K	Climbing Wall Pole	1	☐	8000326

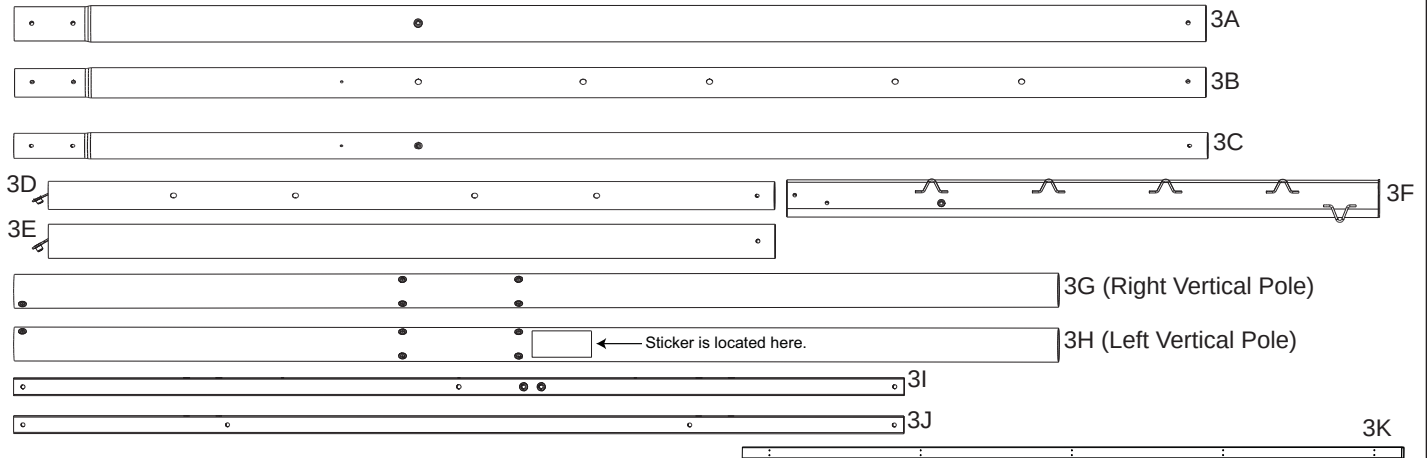


Parts List (Box 4) Kit Box 322501

ID	Item Description	Qty	✓	Part #
4A	Roof Panel	4	☐	8002550

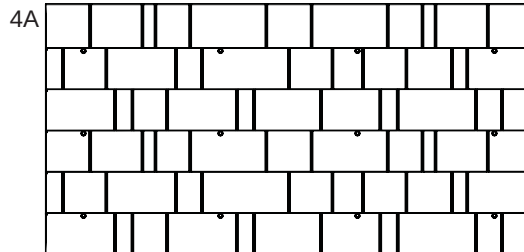

Parts List (Bags 1, 2, & 3)


ID	Item Description	Qty	✓	Part #					
(Bag 1) 223001	Swing Bar				(Bag 2) 224000	Slide	1	☐	8000861
B1	Swing Bar	1	☐	8002580	(Bag 3) 1052119	Climbing Wall			
					B3	Climbing Wall Panel	2	☐	1051768

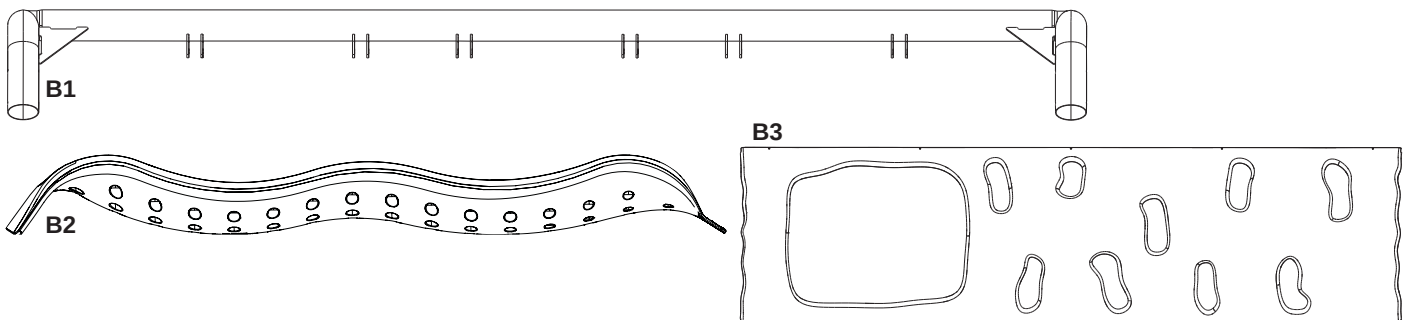

Hardware List (All Hardware is located in Box 1 Part #1066388)


ID	Item Description	Qty	✓	Part #					
HA	Bolt, 5/16" x 3/4"	52	□	8000162	HL	Nut, Acorn 5/16"	19	□	8000165
HB	Bolt, 5/16" x 1 1/4"	9	□	8000163	HM	Nut, Nylock 5/16"	4	□	8000209
HC	Bolt, 5/16" x 1 3/4"	2	□	8000134	HN	Nut, Top Lock 5/16"	1	□	8000694
HD	Bolt, 5/16" x 2"	3	□	8000307	HO	Screw, #14 x 3/4"	32	□	8000522
HE	Bolt, 5/16" x 2 1/2"	9	□	8000534	HP	Screw, #14 x 1 1/4"	51	□	8000350
HF	Bolt, 5/16" x 3 1/2"	8	□	8001336	HQ	Quick Link	6	□	8001337
HG	Bolt, 5/16" x 4"	2	□	8001834	HR	Washer, Fender	1	□	8002914
HH	Bolt, Hex 5/16" x 2"	1	□	8000693	HS	Bolt, 5/16" x 1"	4	□	8000412
HI	Bolt, Eye 5/16" x 1 1/8"	3	□	8001300	HT	Allen Wrench, 3/16" Equal Length	1	□	8002010
HJ	Washer 1/4" Zinc	90	□	8002027	HU	Allen Wrench, 3/16" Standard	1	□	8000355
HK	Chalkboard Spacer, 1/2"	2	□	1066365	HV	Bit, # 3 Apex (not shown)	1	□	8000510
					HW	Tap, 5/16 (not shown)	1	□	8000565

There may be extra hardware in this bag.

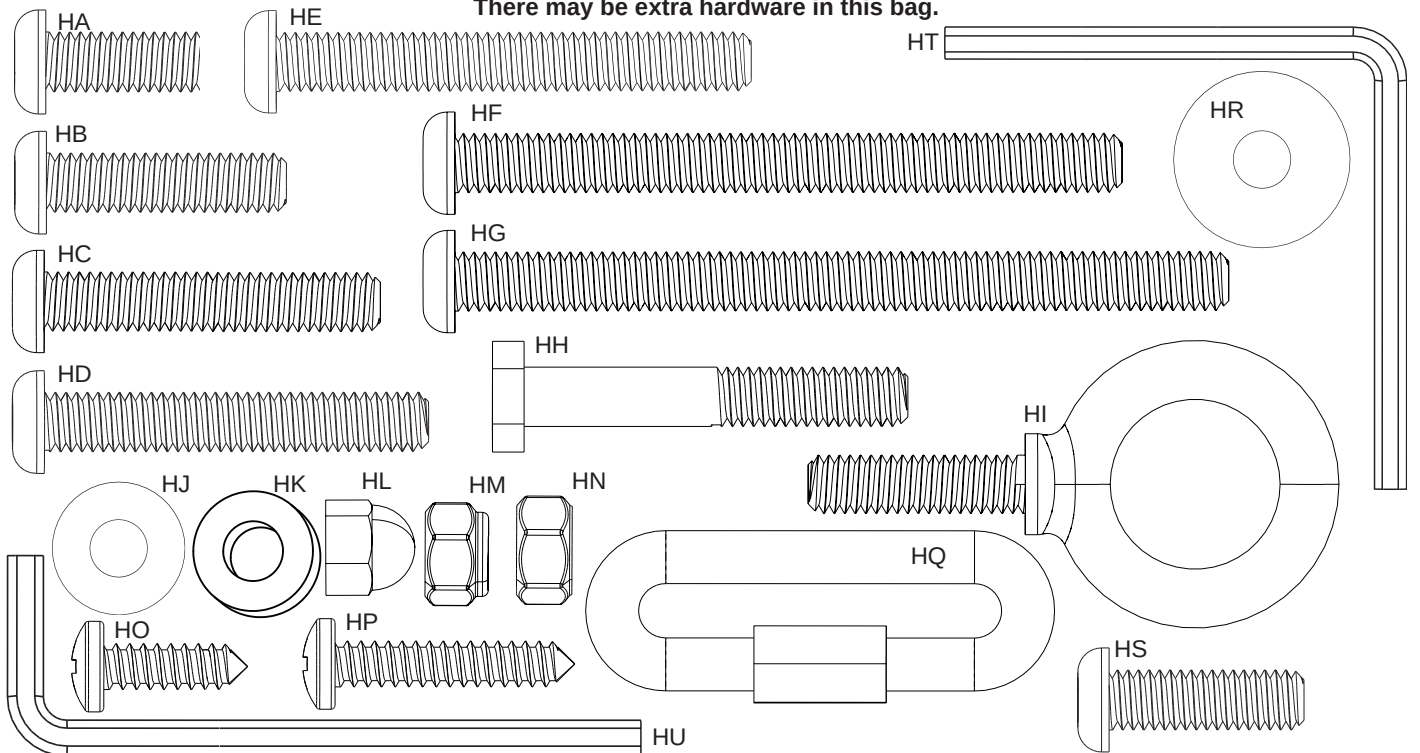

Swing Hardware List (All Hardware is located in Box 1 Part #8000817)


ID	Item Description	Qty	✓	Part #					
SA	Pendulum	6	□	8000014	SD	Washer, Small Nylon 7/16"	12	□	8000154
SB	Bolt, 7/16" x 2"	6	□	8000167	SE	Washer, Large Nylon 7/16"	12	□	8000169
SC	Nut, Acorn 7/16"	6	□	8000170	SF	Allen Wrench, 1/4"	1	□	8000356

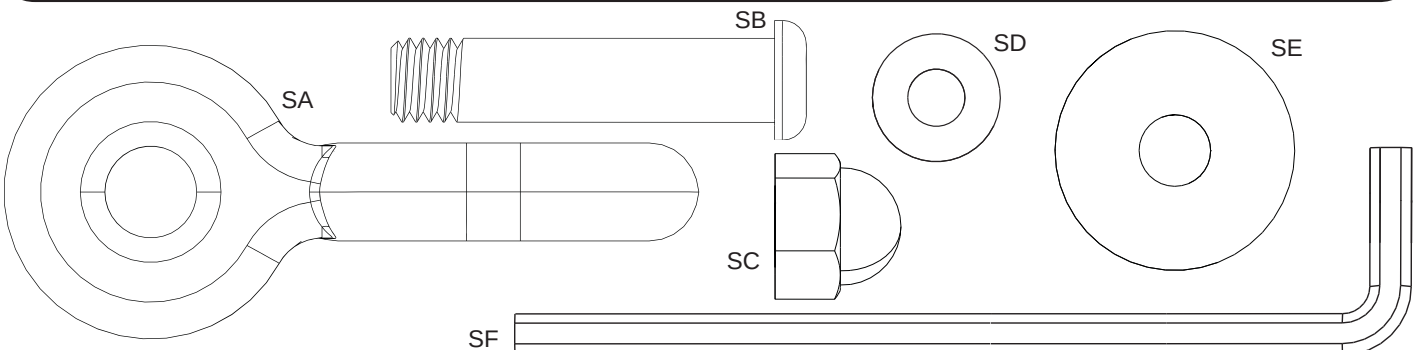

Caps, Hardware List (All Hardware is located in Box 1 Part #8002878)

ID	Item Description	Qty	✓	Part #				
CA	Cap, Hole	20	□	8000265	CF	Cap, Cargo Net Pole	2	□ 8000883
CB	Cap, 3" Flat Round	4	□	8000996	CG	Cap, Angled Ladder	2	□ 8000788
CC	Cap, 1 1/2" Dome	8	□	8001087	CH	Cap, D-Tube End	6	□ 8001007
CD	Cap, Angled Foot	6	□	8001306	CI	Cap, Square Black 1 1/2"	14	□ 1061365
CE	Cap, 1 1/2" Square w/Hole	6	□	8001077	CJ	Cap, Flat Black 7/8" x 1 1/2"	2	□ 8000318
					CK	Cap, Under-Deck Swing	1	□ 1067453

There may be extra caps in this bag.

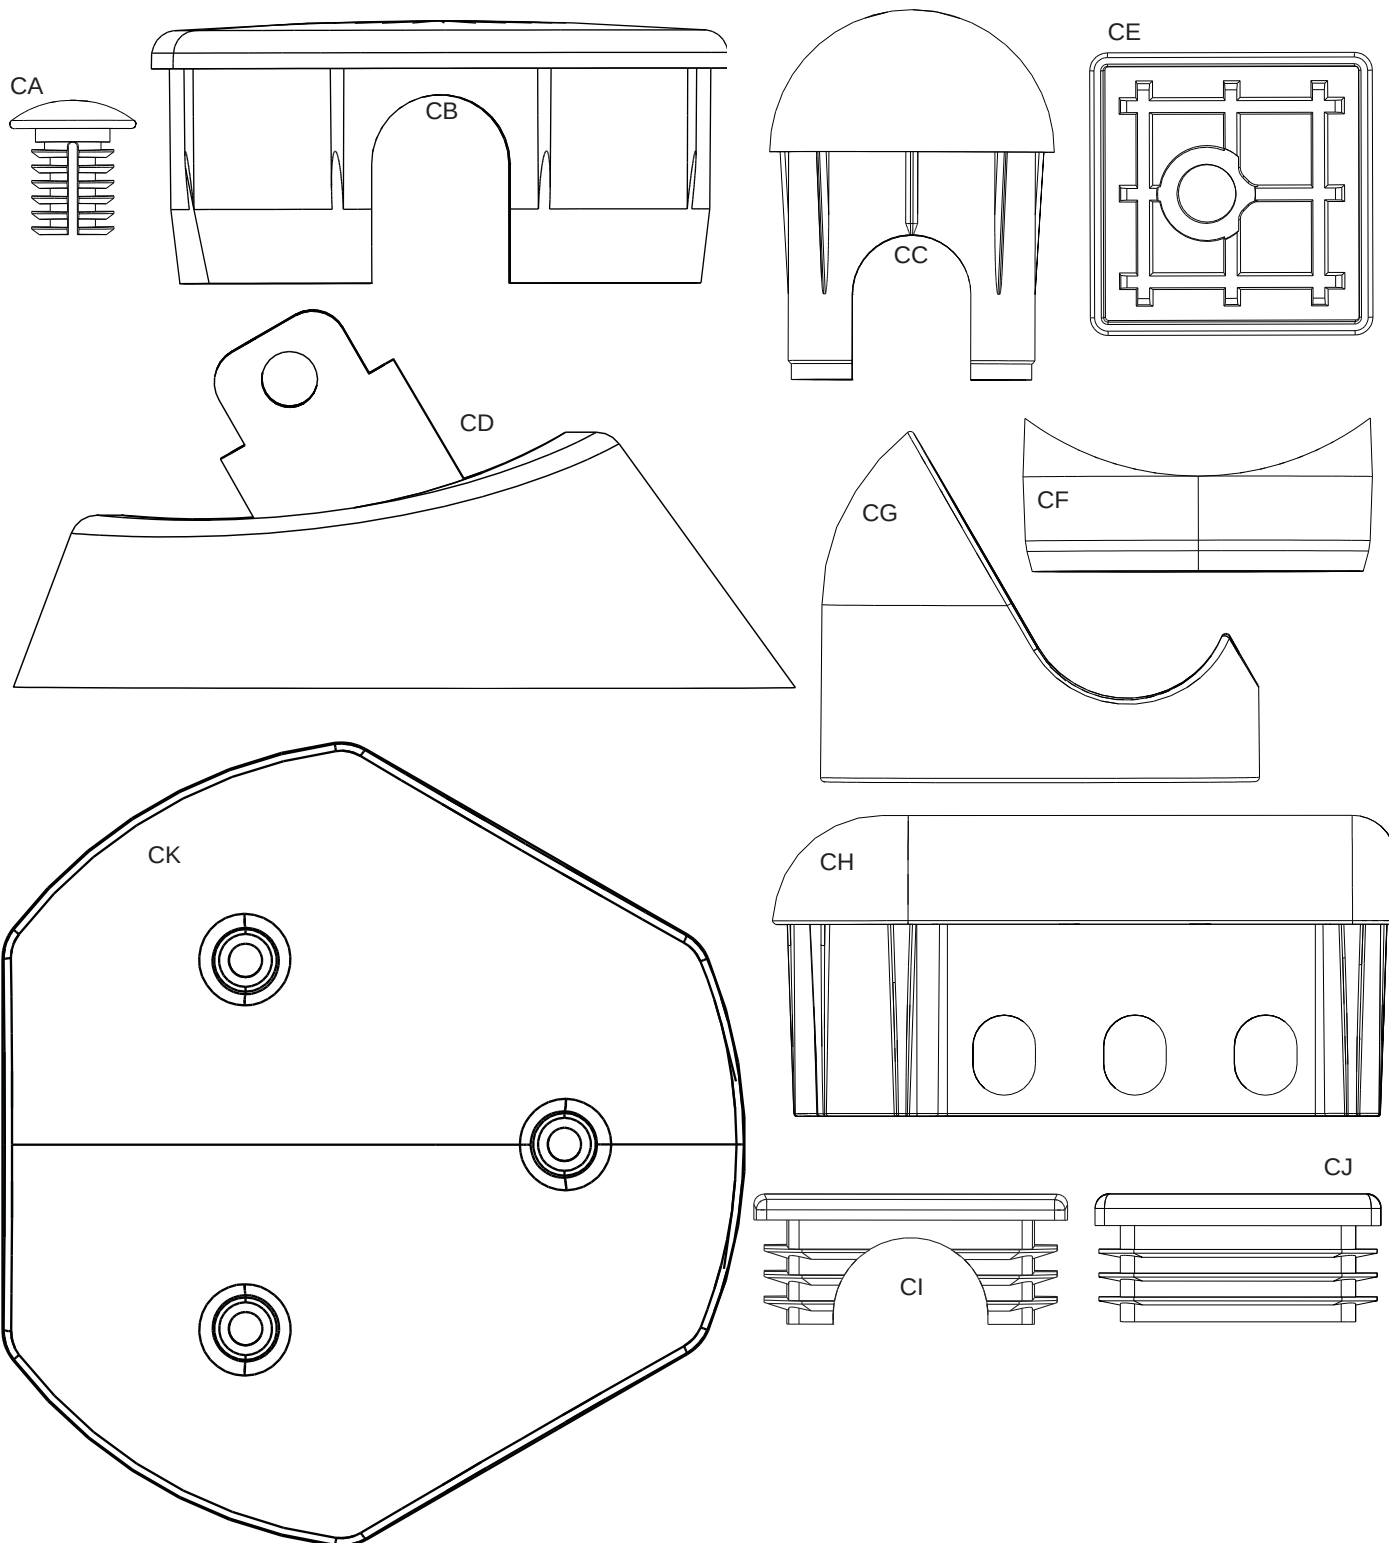


1

Insert the A-Frame Poles (3A) into the Swing Bar (B1) and secure as shown.





Make sure there is NOT a nut insert in the location specified.

Parts for this Step are Located in Bag 1 and Box 3



HJ x 8

HL x 4

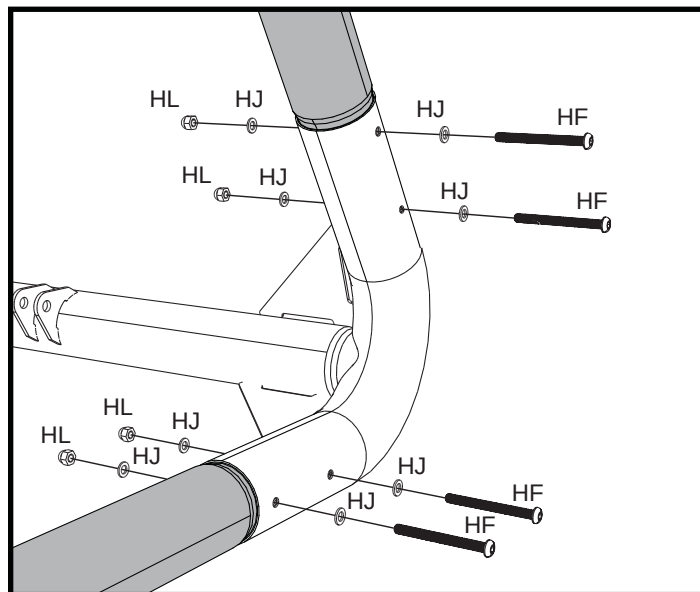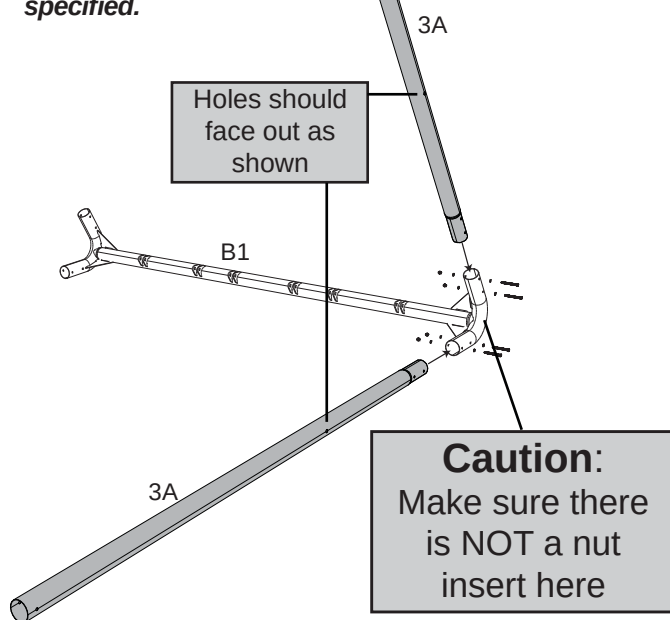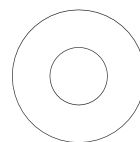




2

Attach the 44" Turn Bar (2G) to the A-Frame Poles (3A). Secure both sides as shown.

Make sure there is NOT a nut insert in the location specified.

Parts for this Step are Located in Box 2

HJ x 2

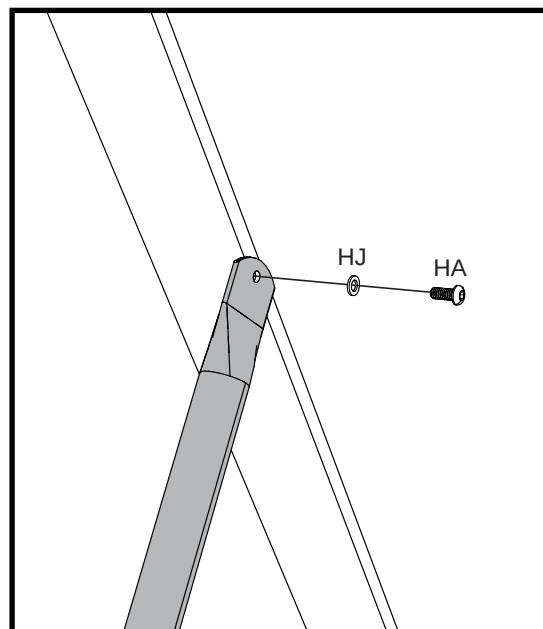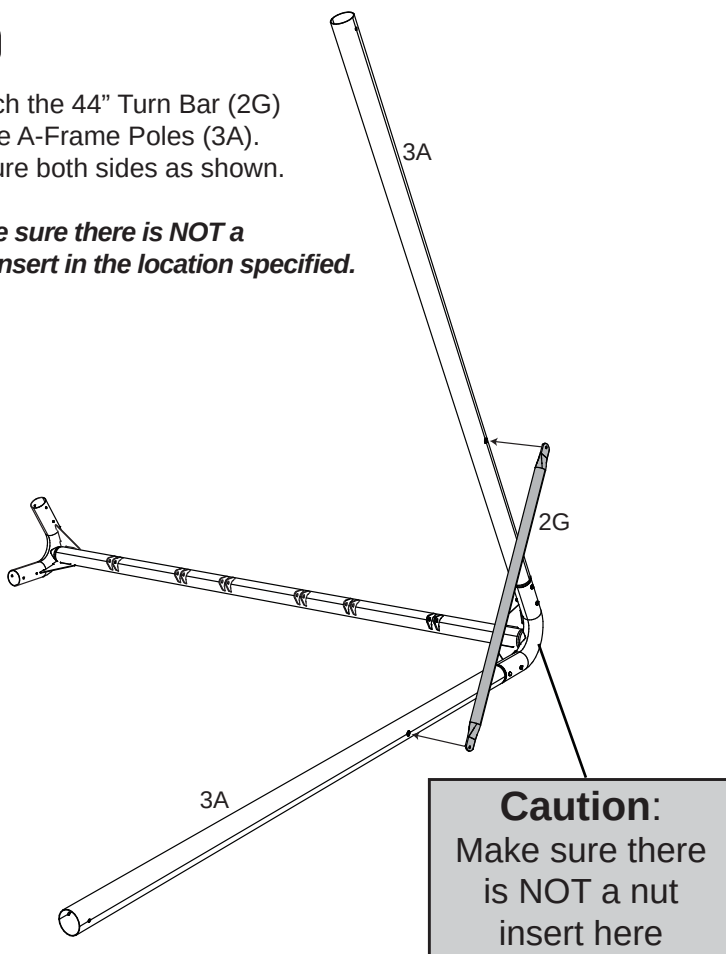

3

Insert the Ladder Side Pole (3B) and the Cargo Side Pole (3C) into the other end of the Swing Bar (B1).

Make sure the Poles are oriented as shown, and that there is a nut insert in the location specified.

Six holes face out

The holes must face out

Parts for this Step are Located in Bag 1 and Box 3

HF x 4

HJ x 8

HL x 4

Caution:
Make sure there is a nut insert here

4

Attach the 45" D-Tube (2D) to the Ladder and Cargo Side Poles (3B, 3C) as shown. Make sure the flat and round sides of the D-Tube are oriented as shown.

Parts for this Step are Located in Box 2

HJ x 2

HA x 2

Round Side



Flat Side

HA

HJ


5

Insert D-Tube End Caps (CH) into each end of the 45" D-Tube (2D). Place Hole Caps (CA) in the locations shown to keep the D-Tube End Caps (CH) in place.

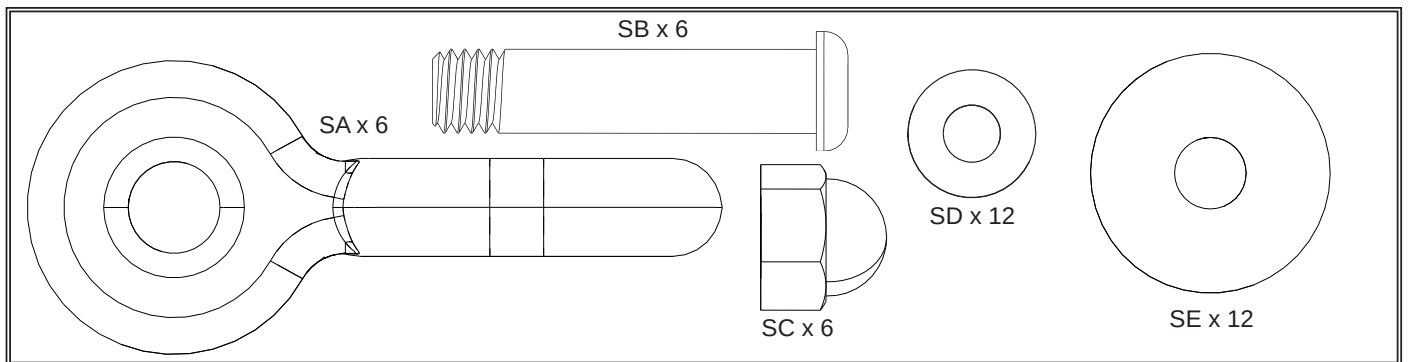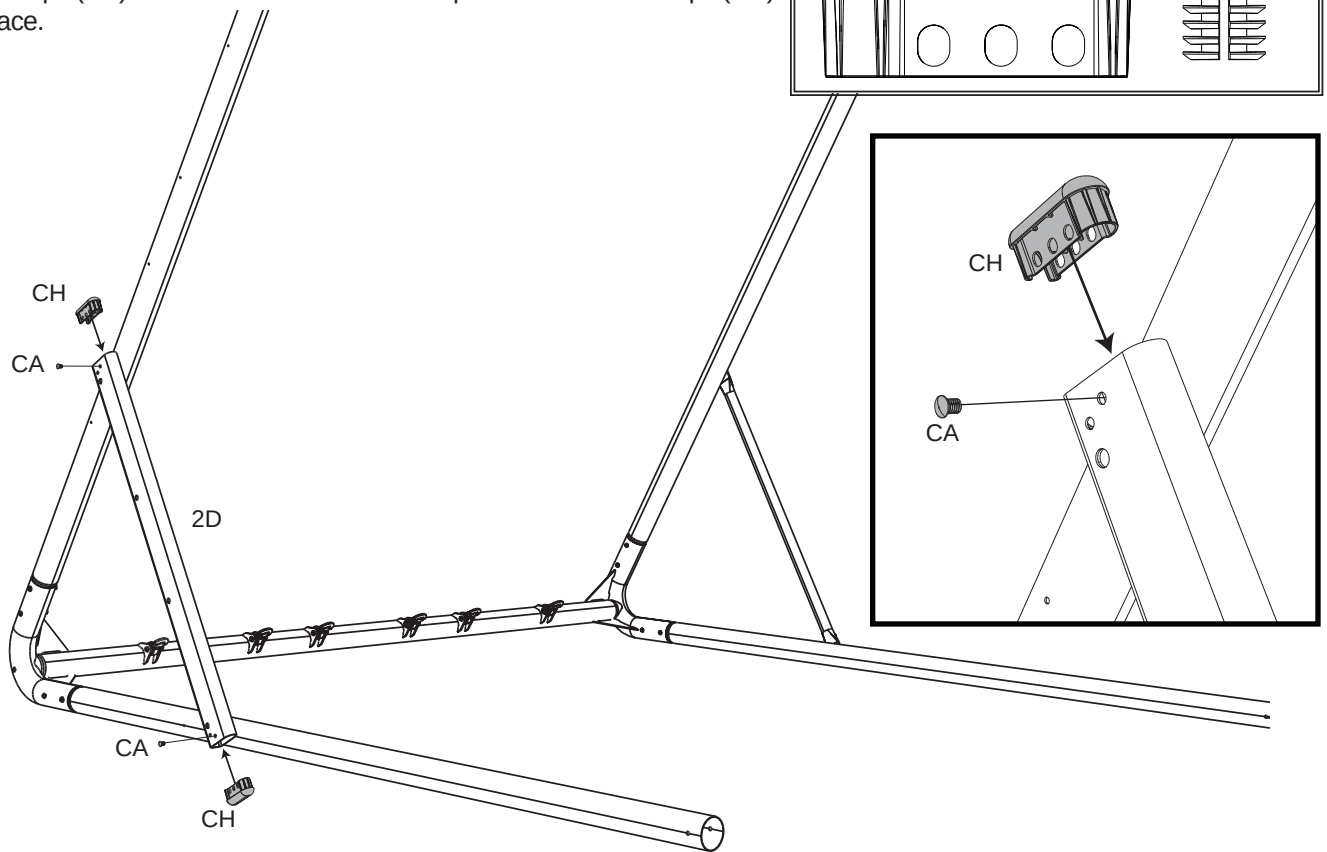

6

Attach the Swing hardware to the Swing Bar (B1) while the A-Frame is still on the ground. Do not over tighten.

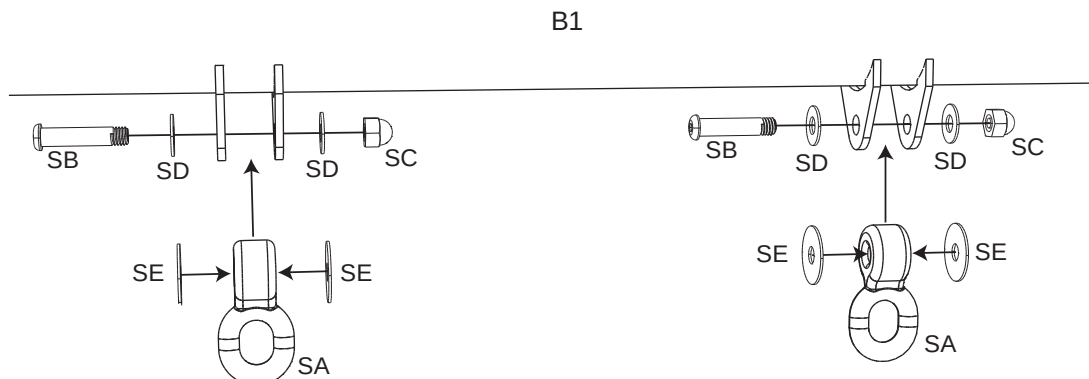


7

Using at least two people, slowly rotate the A-Frame assembly upright.







**Two people
are required
for this step.**

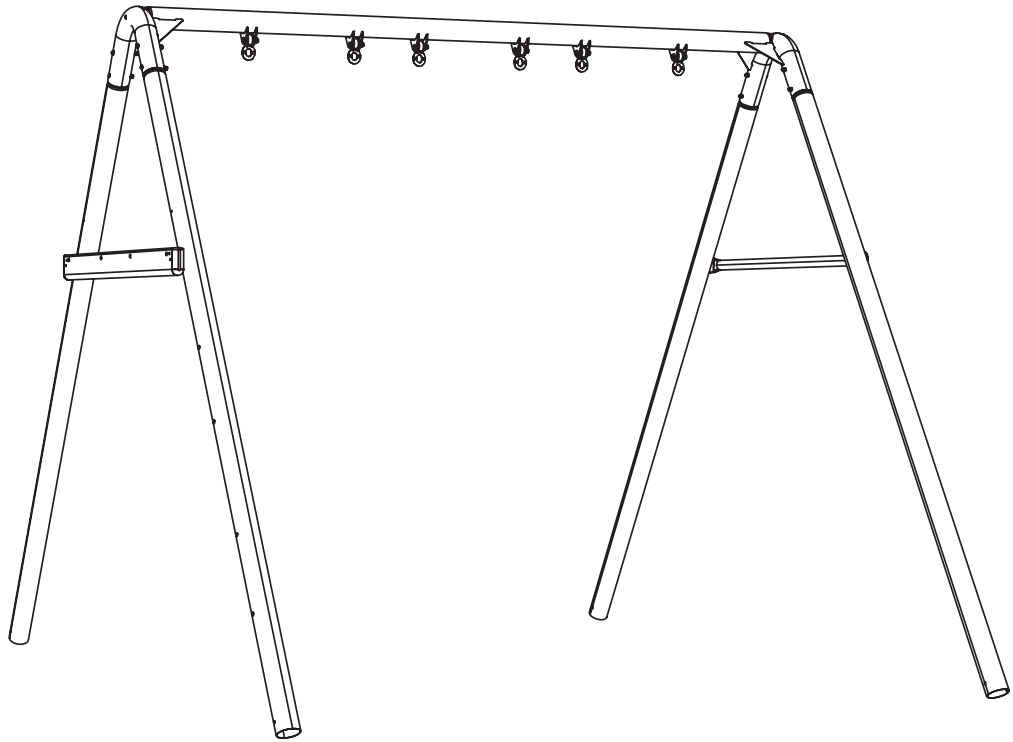

8

Attach the 41" D-Tube (2E) to the Left Vertical Pole (3H) and Right Vertical Pole (3G) and secure with the hardware shown using an Equal Length Allen Wrench (HT). Make sure the flat and round sides of the D-Tube are oriented as shown.

Parts for this Step are Located in Box 2 and 3

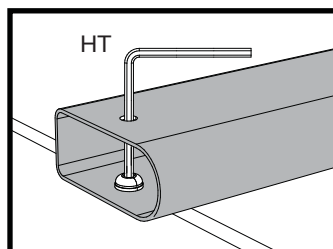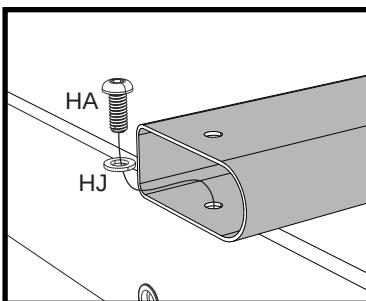
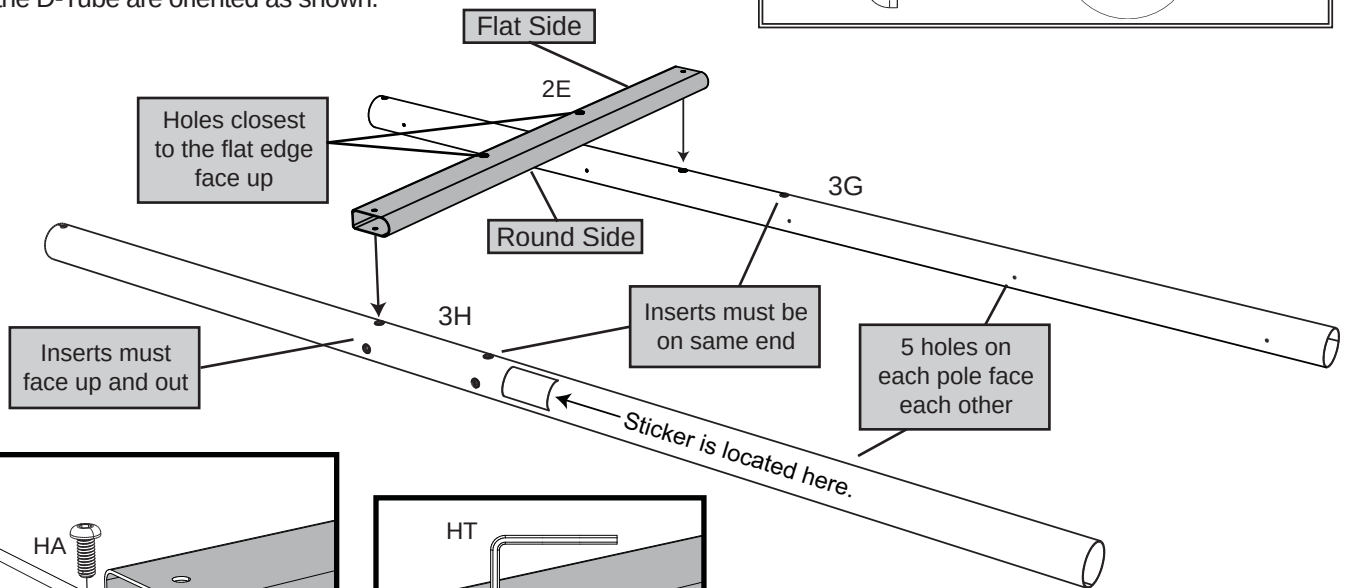
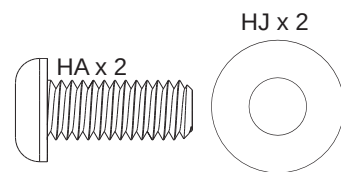


9

Attach Cross Braces (2H) between the 41" D-Tube (2E) and the Left and Right Vertical Poles (3H, 3G).

Parts for this Step are Located in Box 2


HJ x 4

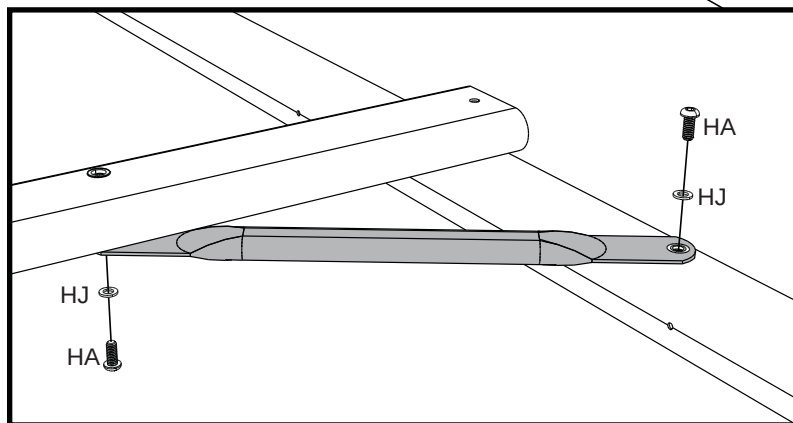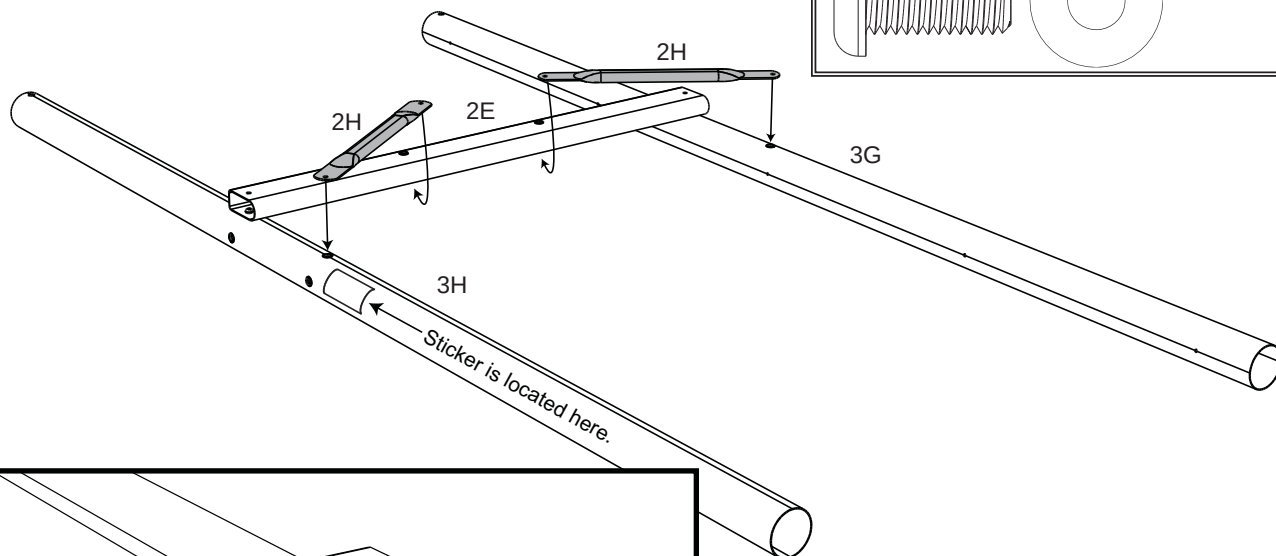


10

Insert D-Tube End Caps (CH) into each end of the 41" D-Tube (2E). Place Hole Caps (CA) in the locations shown to keep the D-Tube End Caps (CH) in place. Insert 3" Flat Round Caps (CB) into the top and bottom of each Vertical Pole (3H, 3G).



CH x 2

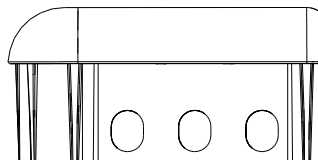

CB x 4

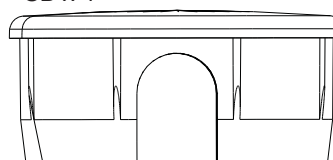


CA x 2

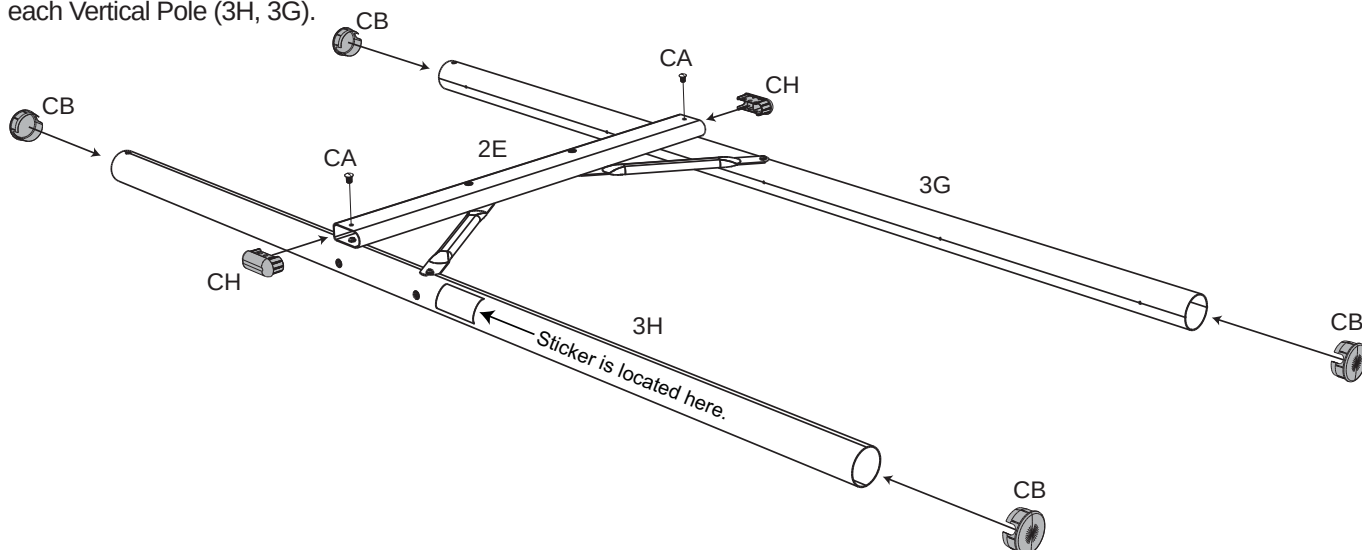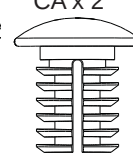


11

Place the Angled Ladder Cap (CG) on the Angled Cargo Net Leg (3E).

Parts for this Step are Located in Box 3

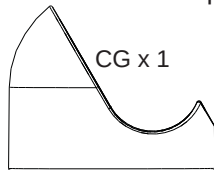


CG x 1






HE x 1

HJ x 1

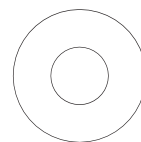

Attach the Angled Cargo Net Leg (3E) to the Cargo Side D-Tube (3F) as shown in the image below. A hole has been drilled for the placement of the Angled Cargo Net Leg (3E). Secure with the hardware shown.

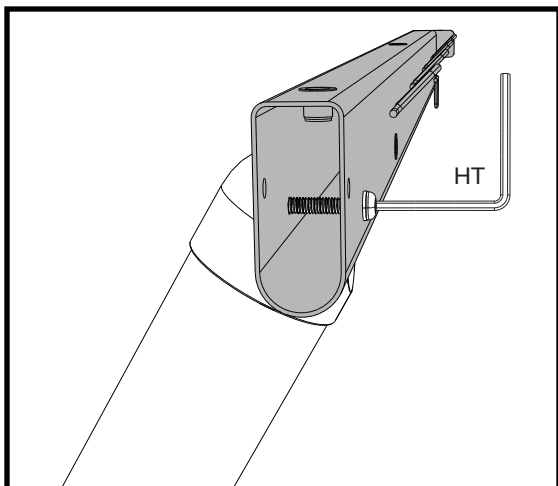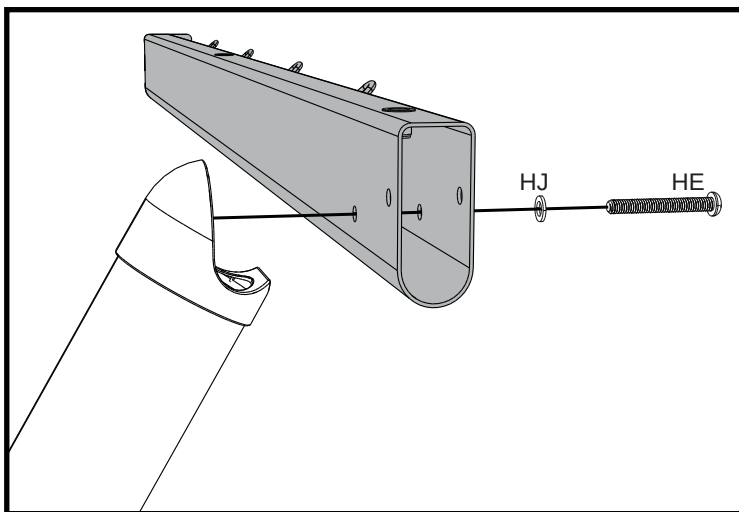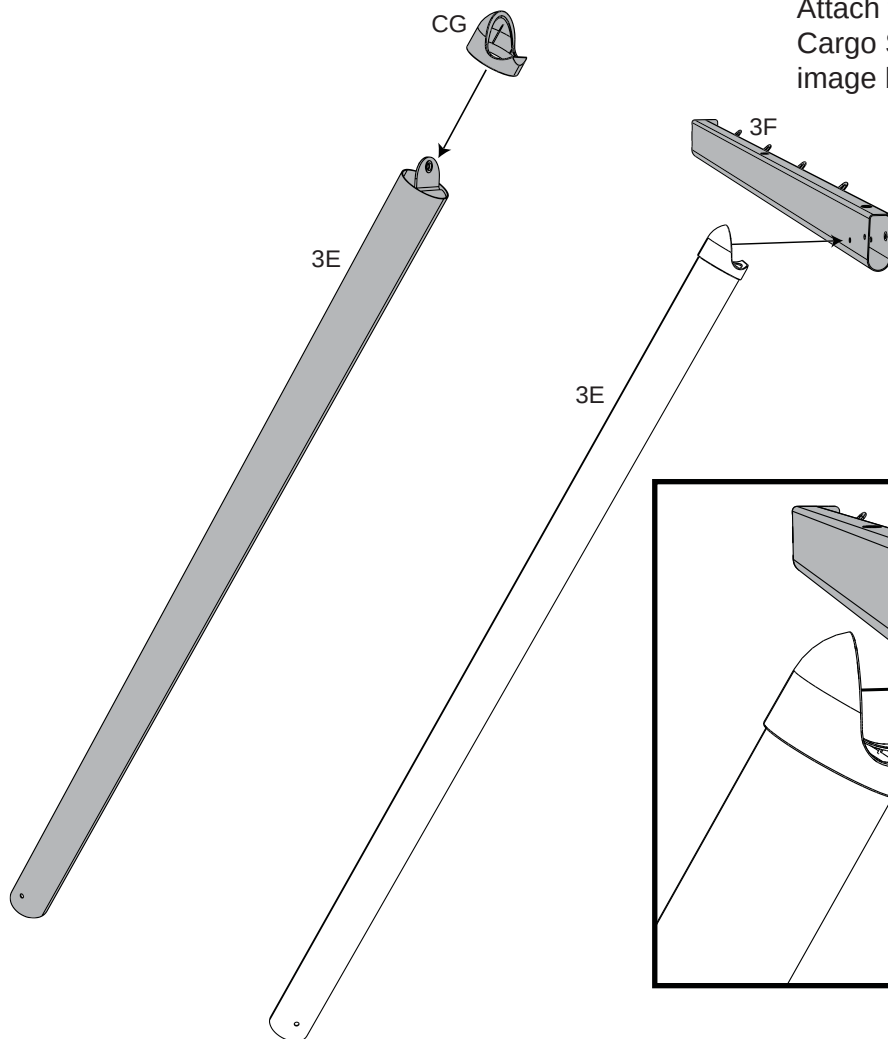

The 2 1/2" Bolt (HE) and 1/4" Zinc Washer (HJ) should be on the outside of the Cargo Side D-Tube (3F) as shown in the image.

Do not over tighten, over tightening may result in bending the D-Tube.


NOTE: Set aside the assembly completed in this step. It will be used in step 14.

12

Stand the Left and Right Vertical Poles (3H, 3G) up next to the side of the A-Frame assembly with the 45" D-Tube (2D).



Three people are required for this step.

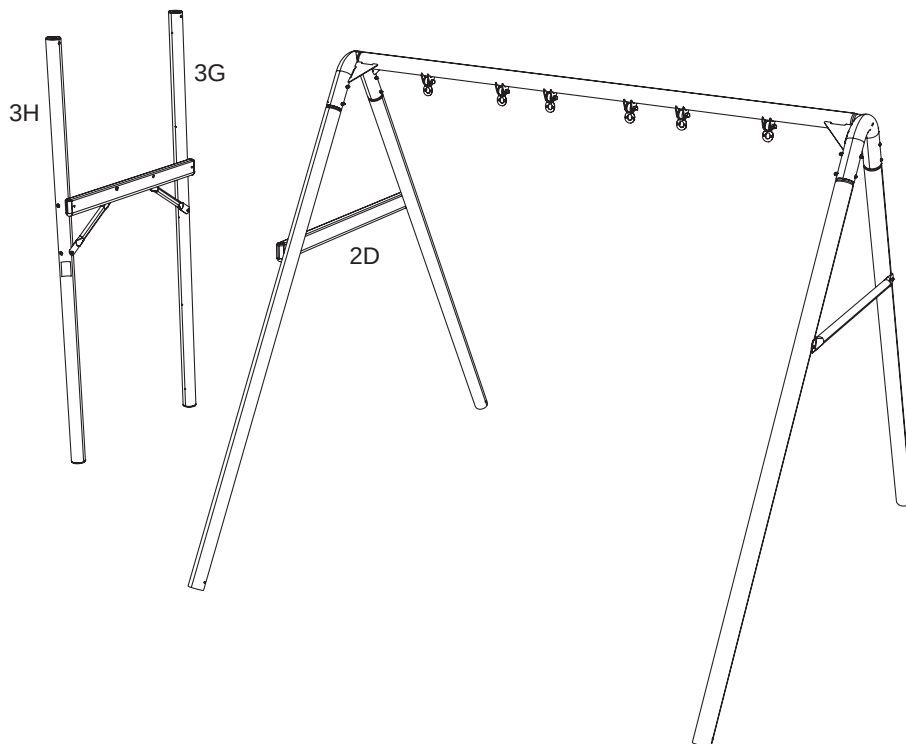


13

Attach the Ladder Side D-Tube (2F) as shown. **The flat side of the D-Tube should face up.**







Three people are required for this step.

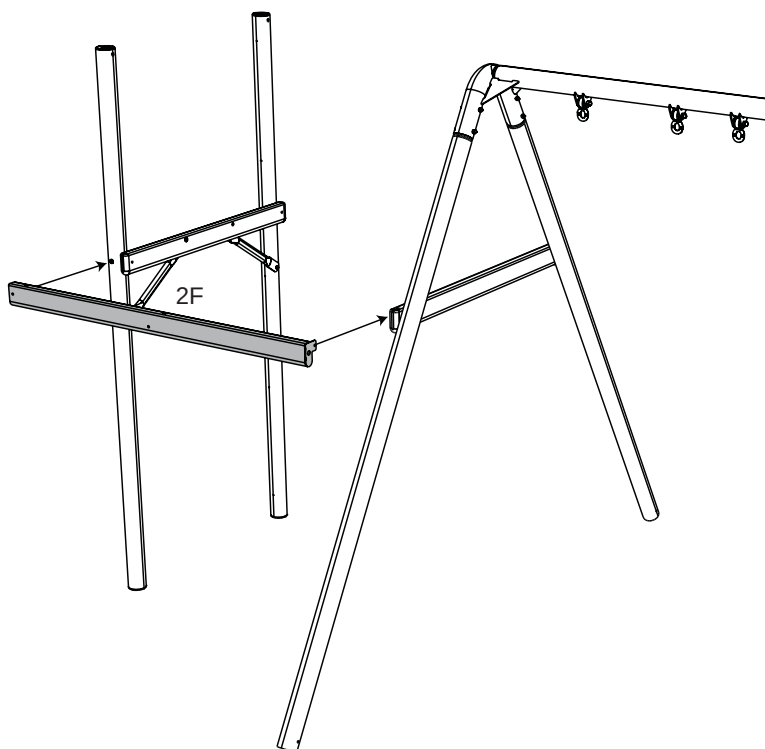

Parts for this Step are Located in Box 2

HJ x 2

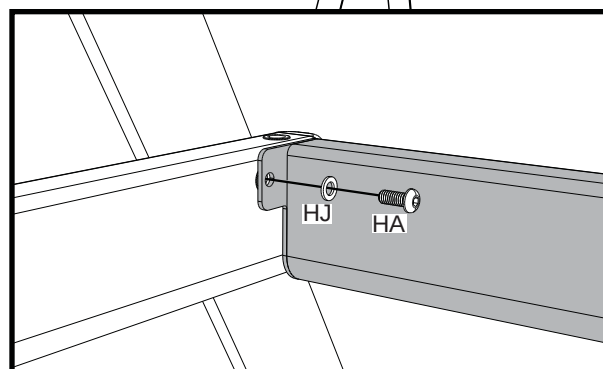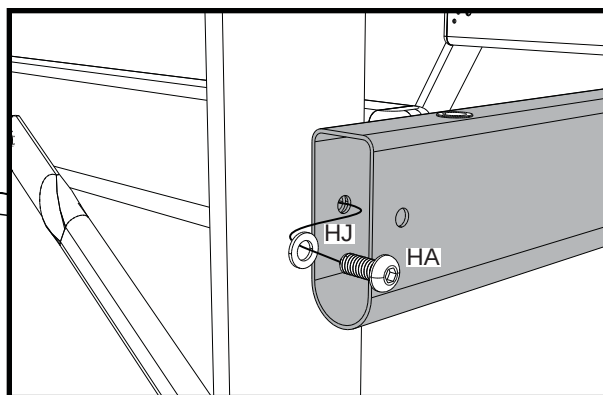



14

Attach the assembly from step 11 as shown. **The flat side of the D-Tube faces up.**




Three people are required for this step.

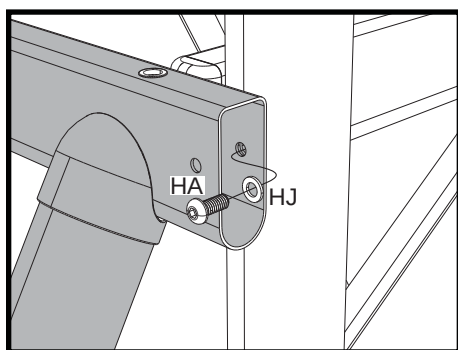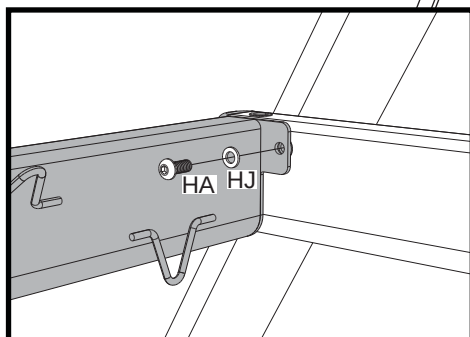

Parts for this Step are Located in Box 3

HJ x 2



3F

3E

15


Attach the Cross Braces (2H) on to the Ladder Side and Cargo Side D-Tubes (2F, 3F).

Parts for this Step are Located in Box 2


HJ x 4






CH x 2

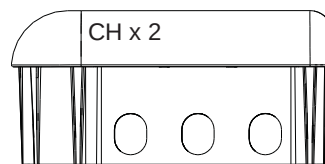

CA x 2

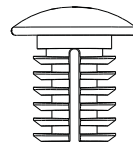

Insert D-Tube End Caps (CH) in the ends of the D-Tubes. Place the Hole Caps (CA) in the locations shown.

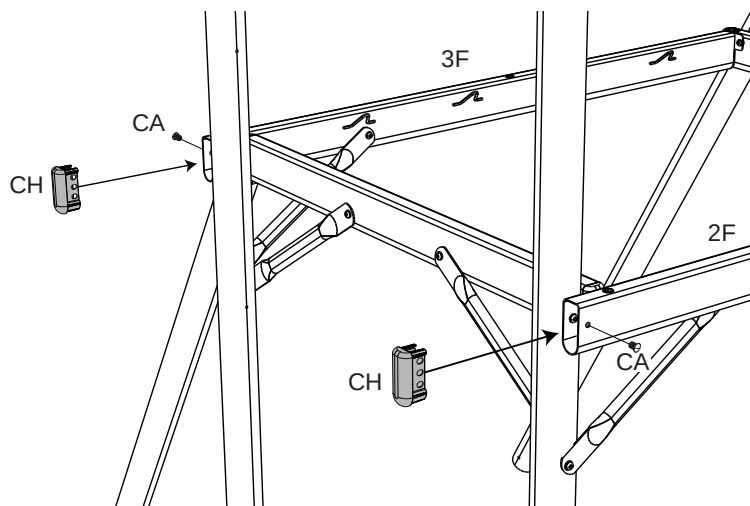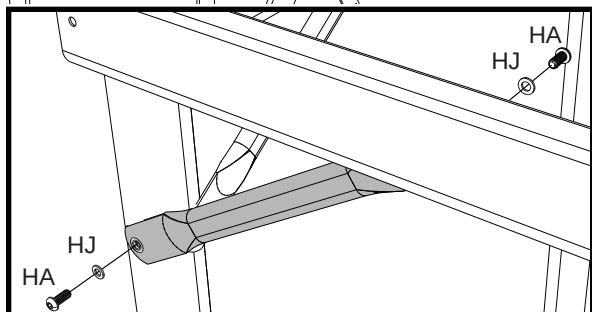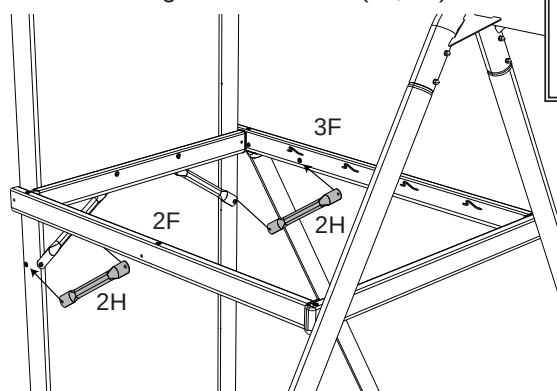



16

Attach the Deck Support (2C) to the D-Tubes as shown and secure with the hardware indicated.




**Two people
are required
for this step.**

Parts for this Step are Located in Box 2

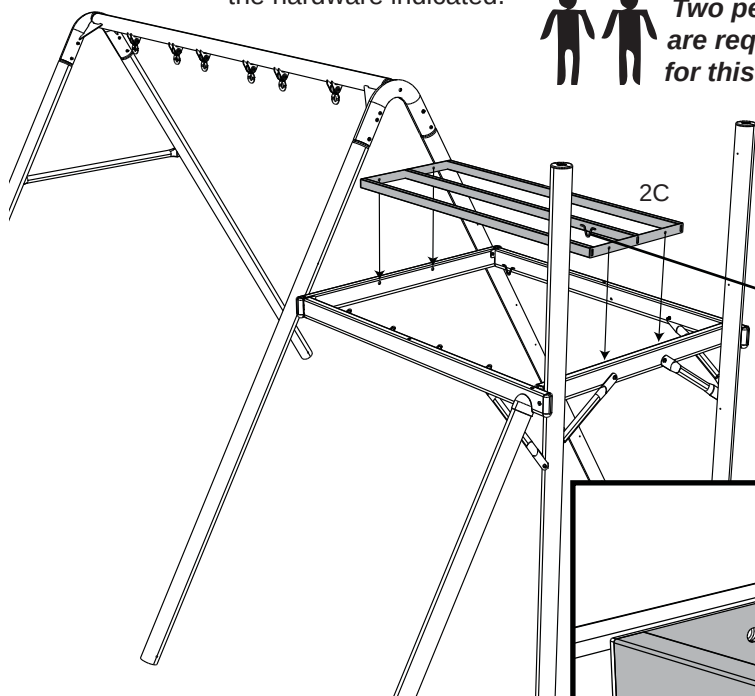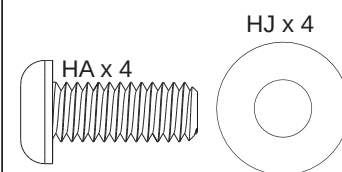

The hook for the
under-deck swing
should face down
as shown

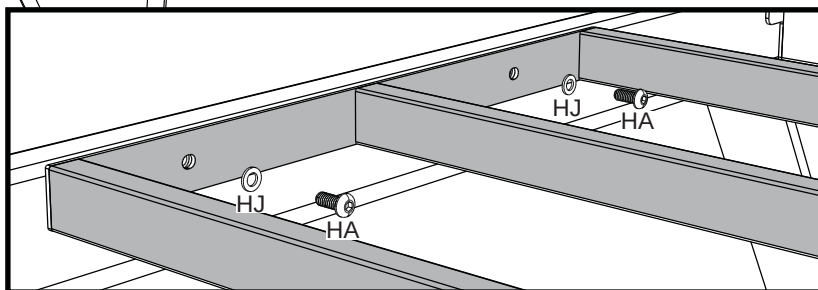

17

Straighten out the ropes of the Cargo Net (1F), and slide the Cargo Net up the angled poles on the play set. The large loops go on the sides and the small loops go at the top and bottom.

Do not attach the top loops of the Cargo Net (1F) to the hooks on the back side of the Cargo Side D-Tube (3F) at this time.




Place the Cargo Net Pole Cap (CF) on each end of the Cargo Net Bottom Pole (2L).


Slide the Cargo Net Bottom Pole (2L) through the bottom loops of the Cargo Net (1F).



**Two people
are required
for this step.**

Parts for this Step are Located in Box 1 and 2

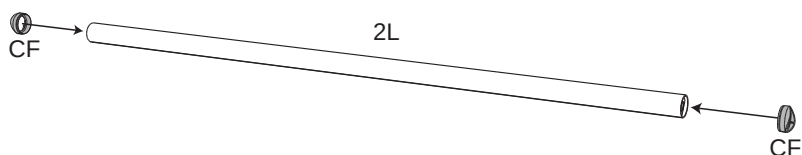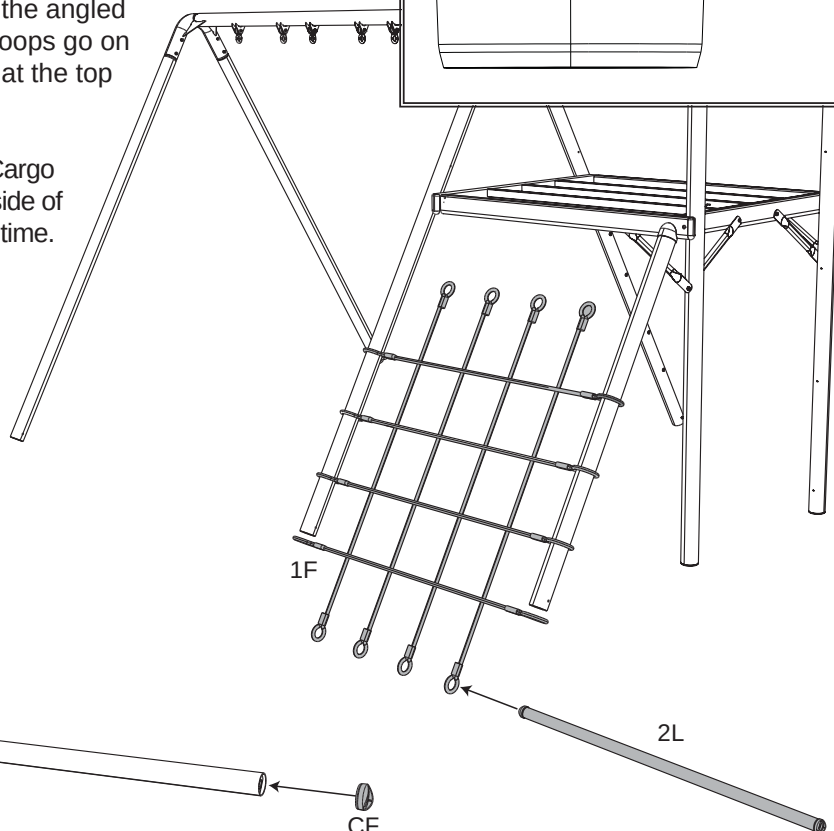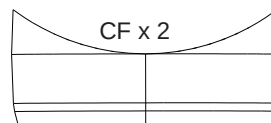

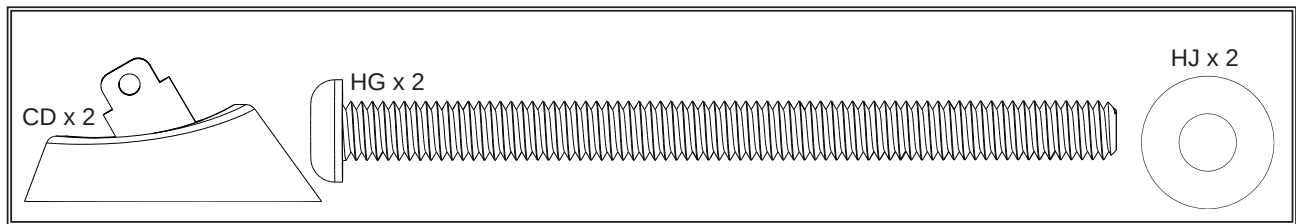


18


Secure the Cargo Net Bottom Pole (2L) to the angled poles with the 4" Bolt (HG) going through the Angled Foot Caps (CD) as shown.



**Two people
are required
for this step.**

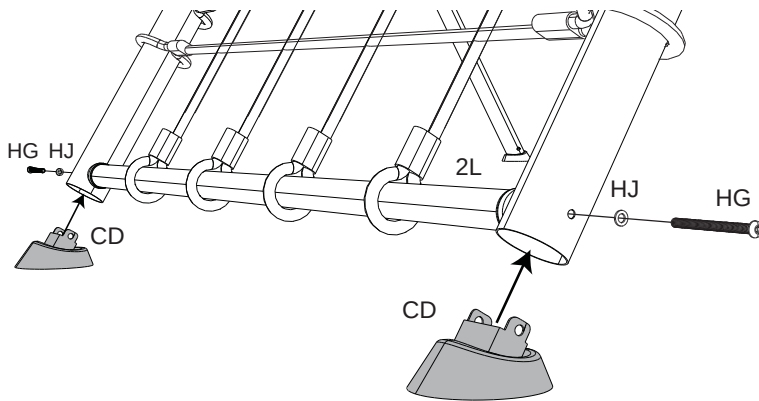




Attach the top loops of the Cargo Net (1F) to the hooks on the back side of the Cargo Side D-Tube (3F).

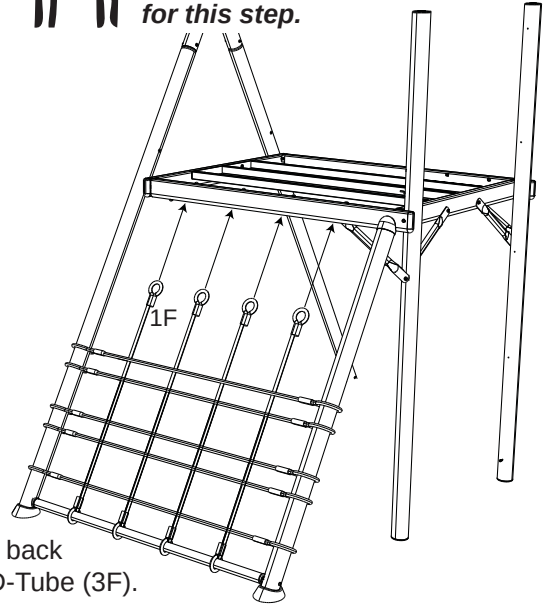

19

Place the Angled Ladder Cap (CG) over the Angled Ladder Leg (3D) and secure to the Ladder Side D-Tube (2F) with the hardware shown.

Parts for this Step are Located in Box 3

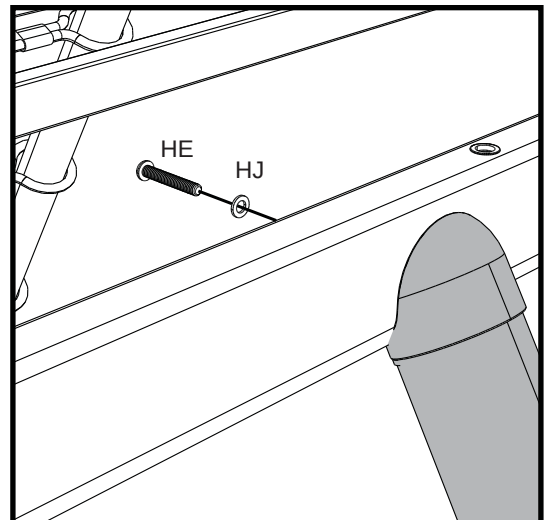
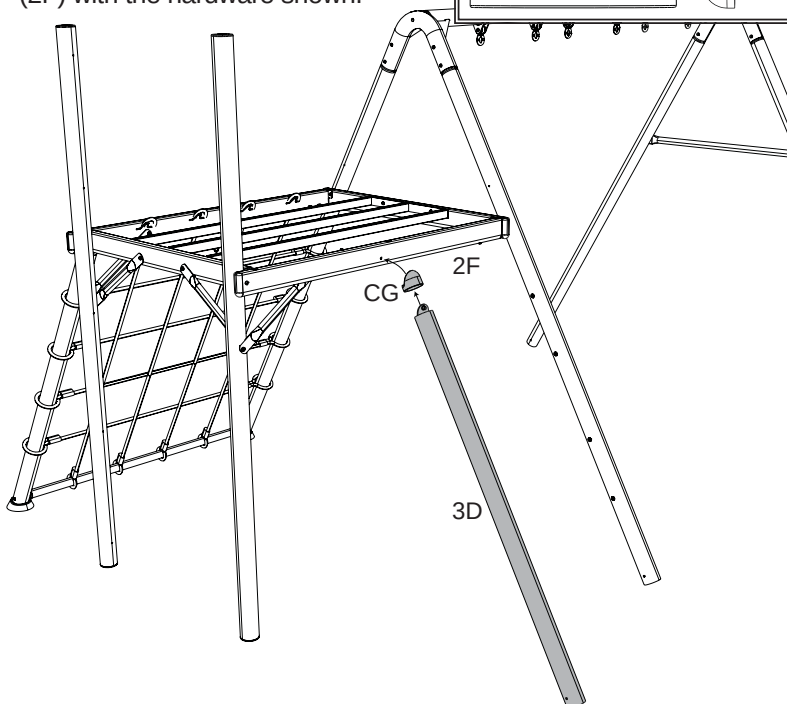
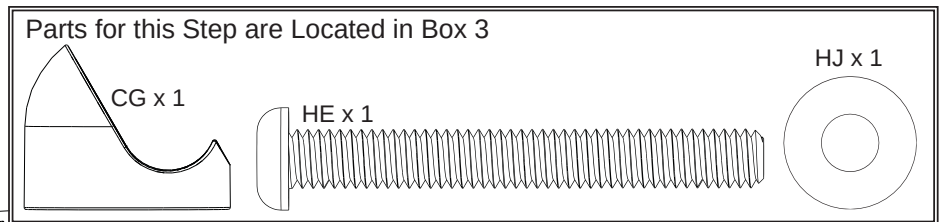


20

Attach the two Ladder Rungs (1C) to the Angled Ladder Leg (3D) and the Ladder Side Pole (3B) as shown.

Do not tighten the hardware until both Ladder Rungs are in place.

Parts for this Step are Located in Box 1

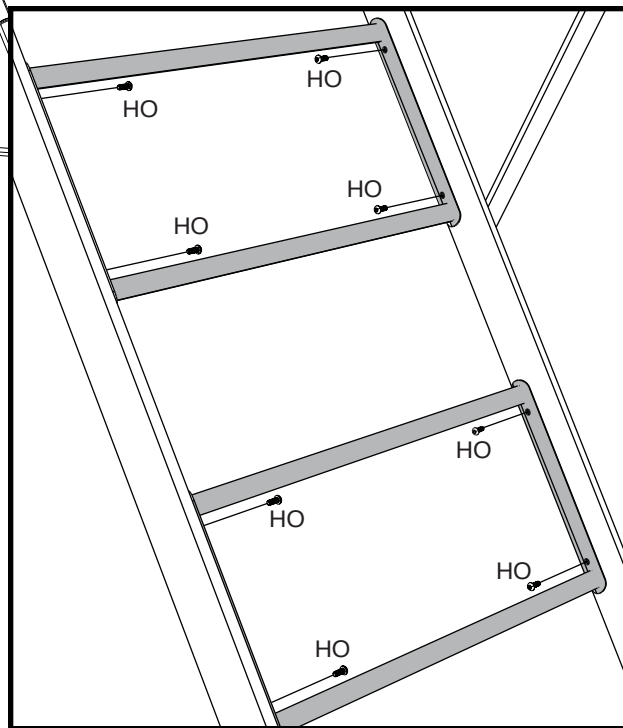
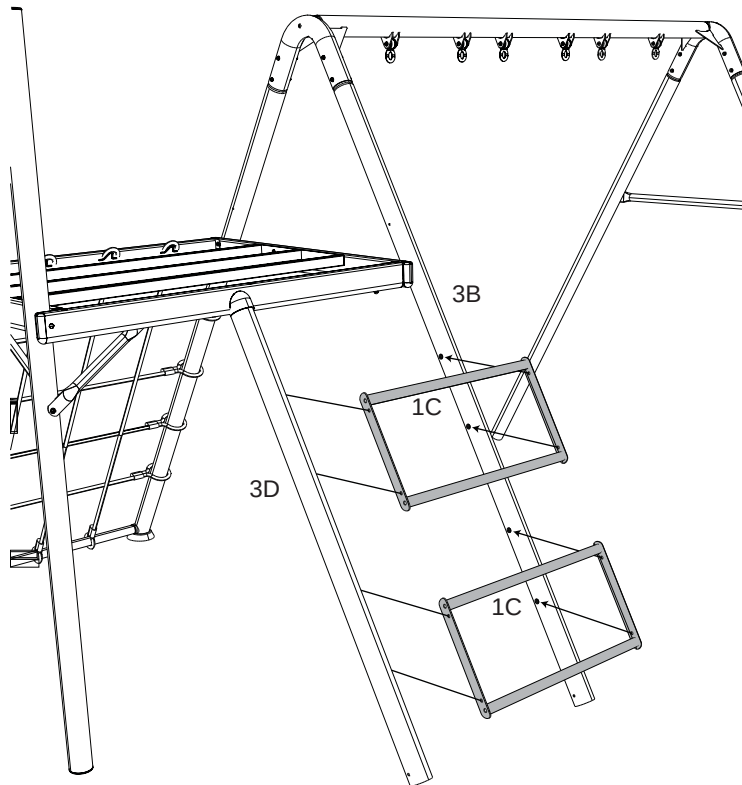



21

Attach the Angled Foot Caps (CD) and then the Hole Caps (CA) to the Ladder Poles as shown.



**Two people
are required
for this step.**

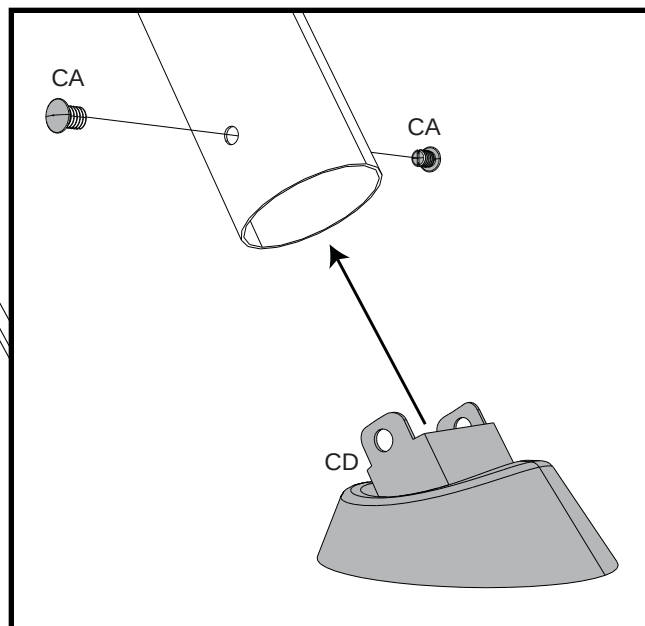
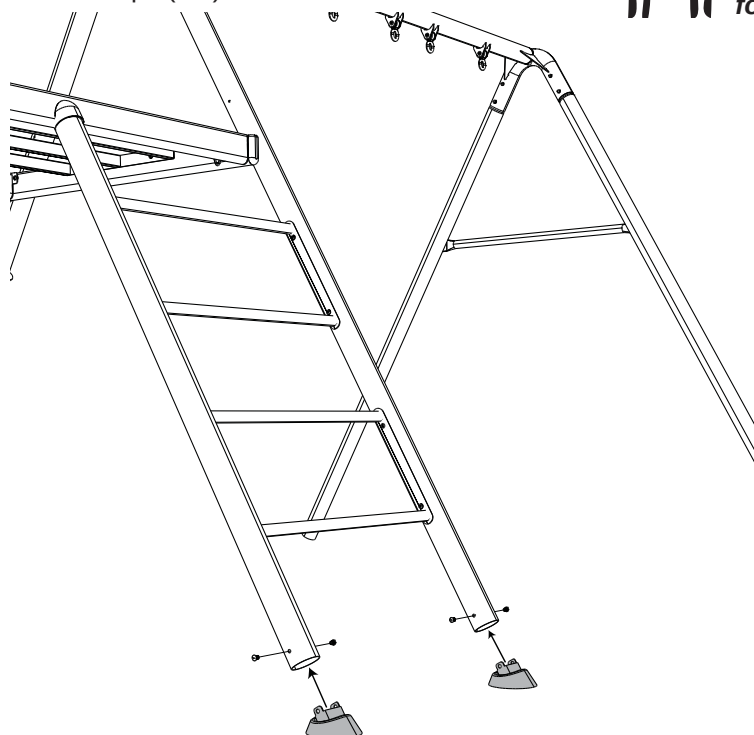
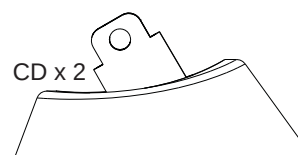


22

Attach the Angled Foot Caps (CD) and then the Hole Caps (CA) to the A-Frame Poles (3A) as shown.



**Two people
are required
for this step.**

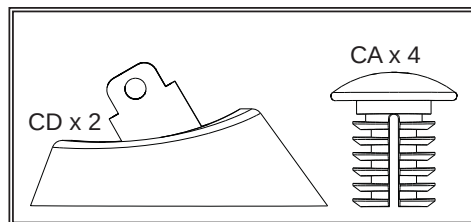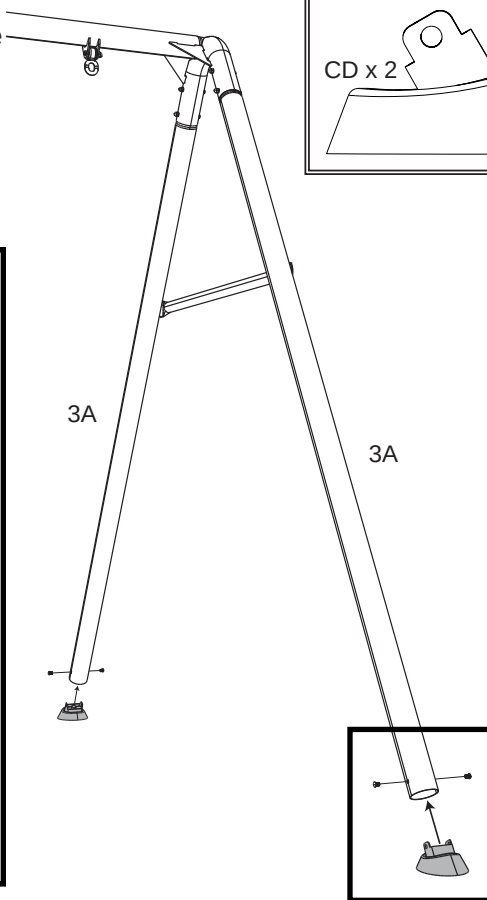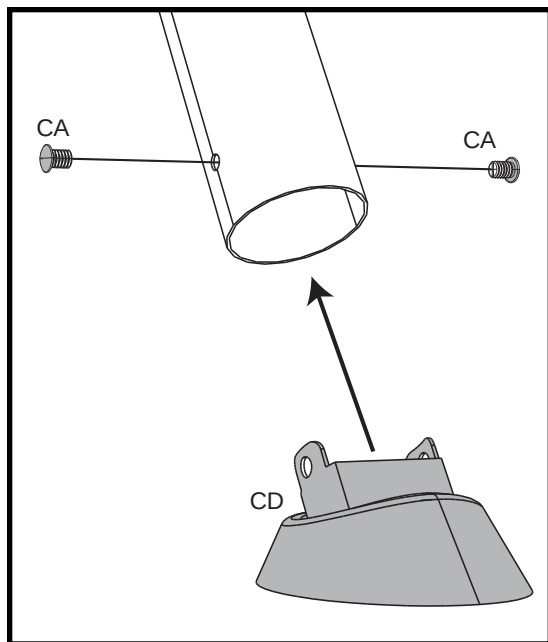


23


Parts for this Step are Located in Box 2

Place the Deck (2A) on top of the Deck Support (2C) as shown.

If there are pre-drilled holes in the deck, make sure they are located in the position shown. This is where the slide will be placed.

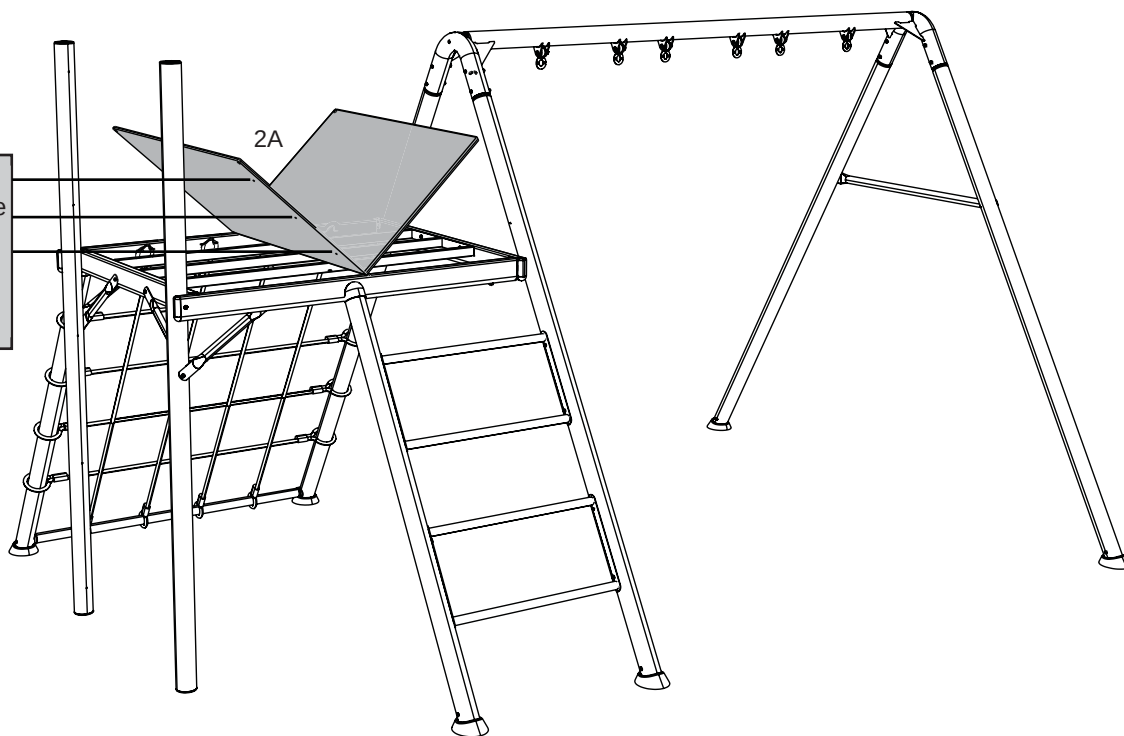


Secure the Deck (2A) by inserting 1 1/4" Bolts (HB) through the 1 1/2" Square Caps with Holes (CE) and into the Deck.

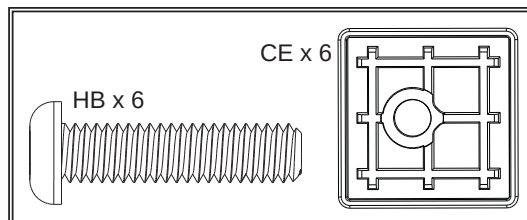

WARNING


Do not stand in the Clubhouse until the floor is completely attached.

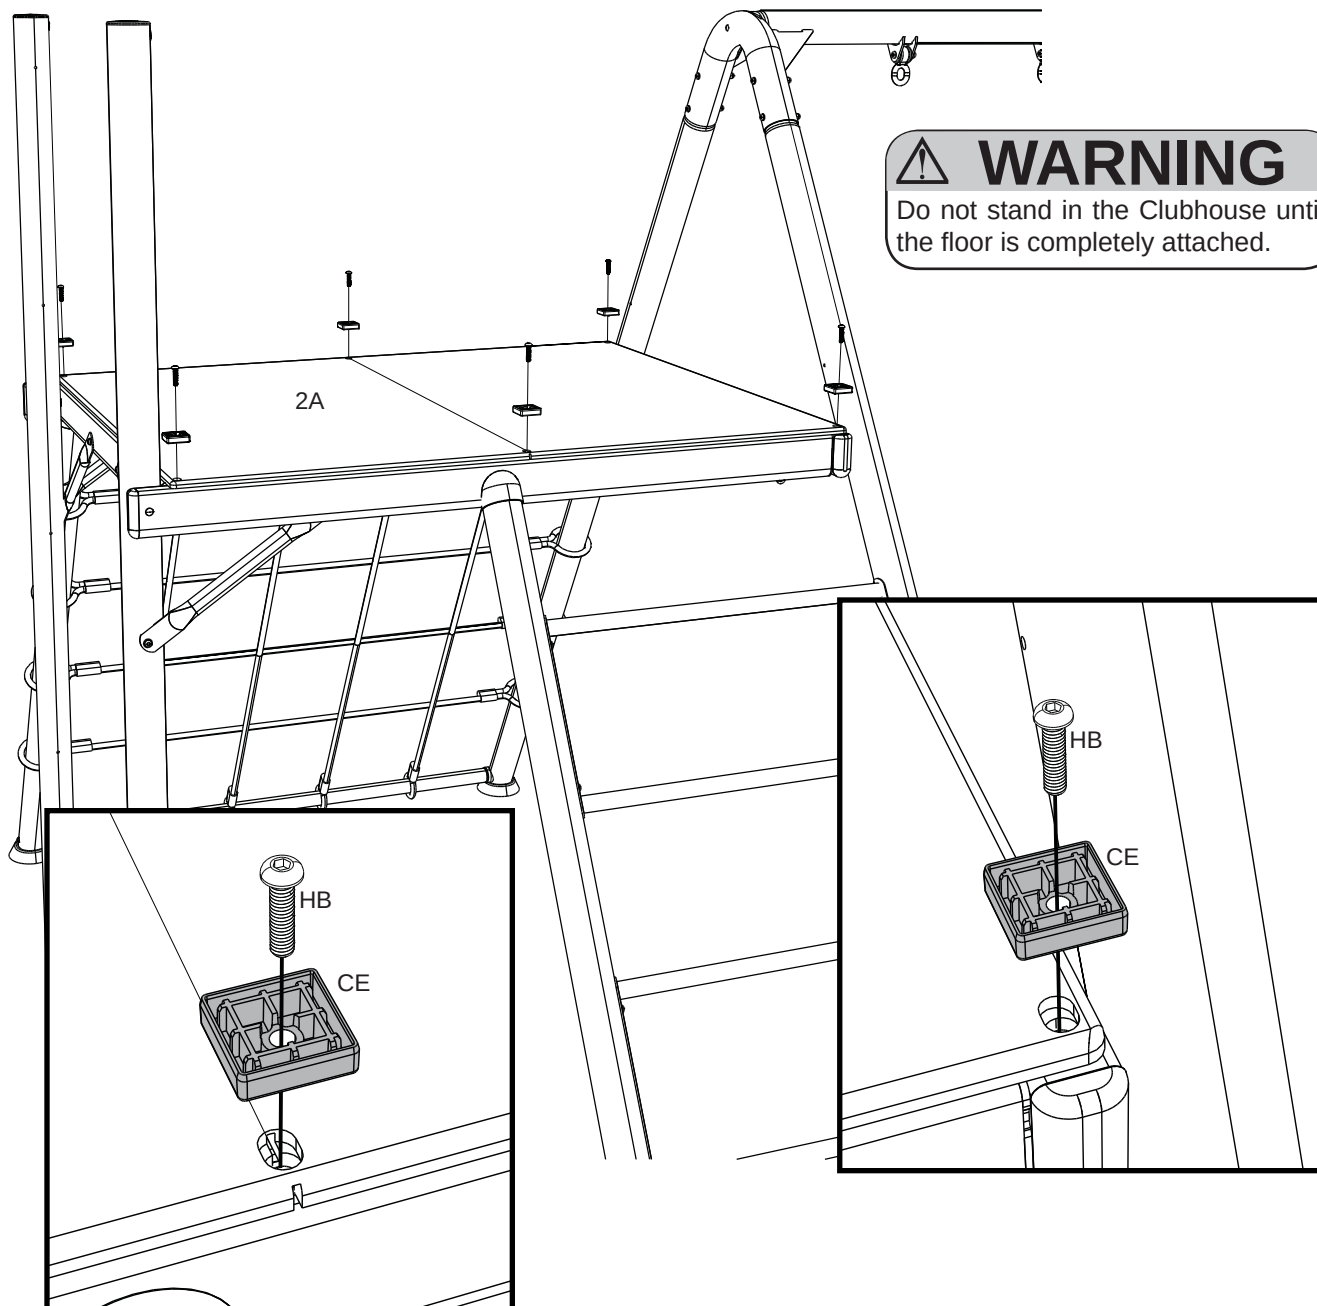



To make sure the Deck is properly aligned, hand-tighten the Bolts until all hardware has been installed, then completely tighten all the Bolts.

Place a Climbing Wall Panel (B3) on the ground, or in a safe drilling position. The indentations in the Climbing Wall indicate the locations needed to be drilled. Using a 1/4" Drill Bit (not included), drill completely through the plastic.

Parts for this Step are Located in Bag 3 and Box 3

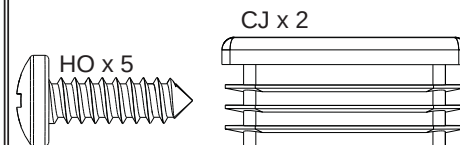



Repeat this step to drill through the indentations in the other Climbing Wall Panel (B3).

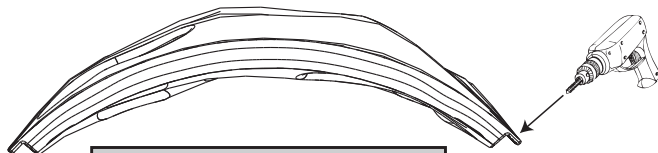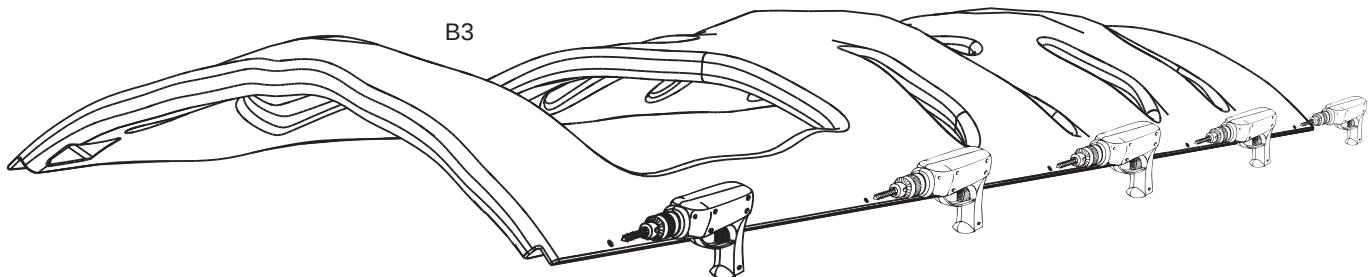

Caution:
Make sure to drill holes
at the angle shown


NOTE: The panels have five indentations on each side for a total of 10 indentations per panel. Make sure to drill through all 20 indentations.

Place a Flat Black Cap (CJ) in each end of the Climbing Wall Pole (3K).

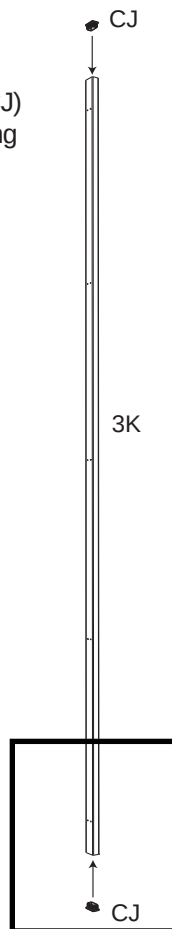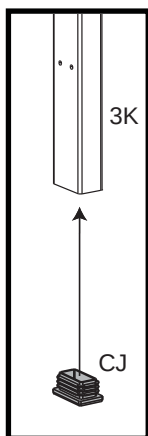

Place the Climbing Wall Pole (3K) into one of the notches on the Climbing Wall Panel as shown. Secure the Pole to the Climbing Wall with the hardware shown.

NOTE: Both Climbing Wall Panels are the same. Mount the panels so that the large openings are opposite.

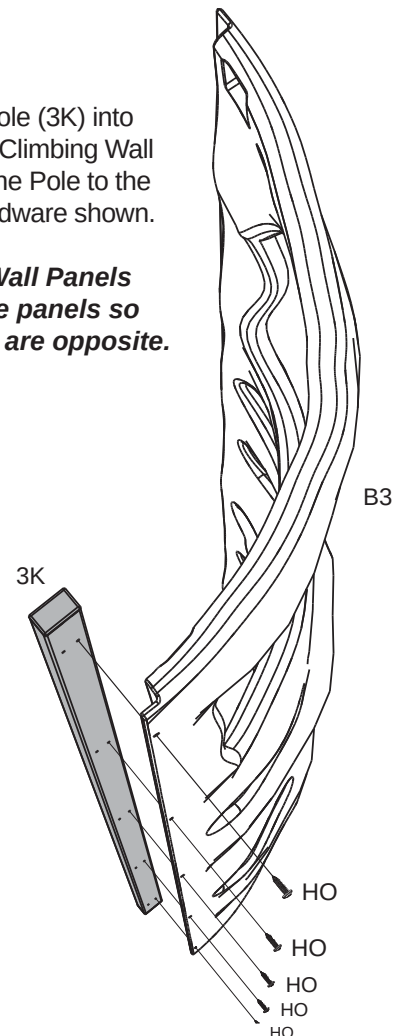

26





Place the Climbing Wall Panel (B3) that is attached to the Climbing Wall Pole (3K) in the location shown. Make sure the Climbing Wall Panel is oriented as shown.

Secure the Climbing Wall Panel (B3) to the Right Vertical Pole (3G) with the hardware shown.



**Two people
are required
for this step.**

Top View

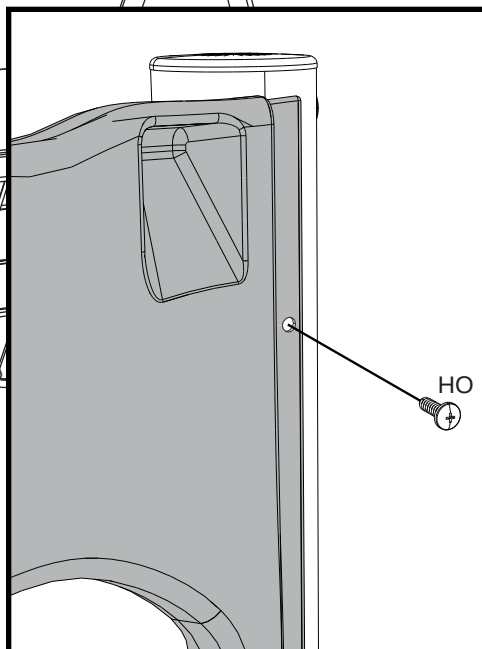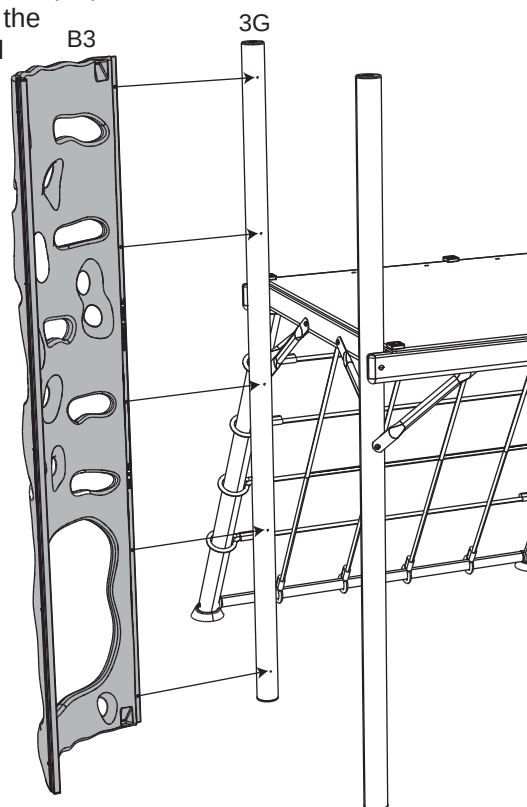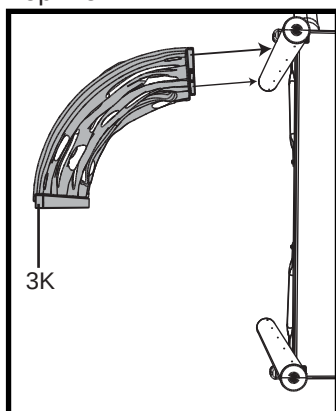

27



Place the other Climbing Wall Panel (B3) that is not attached to the Climbing Wall Pole (3K) in the location shown.

Make sure the Climbing Wall Panel (B3) is oriented as shown in the image below.



**Two people
are required
for this step.**

Top View

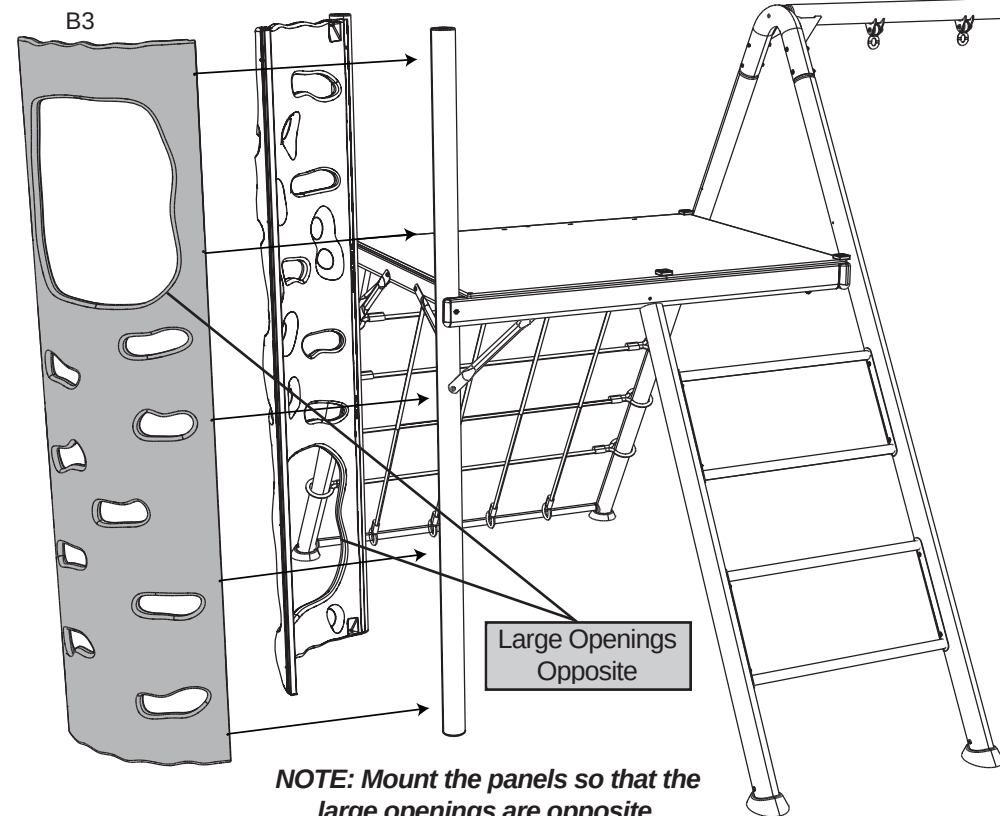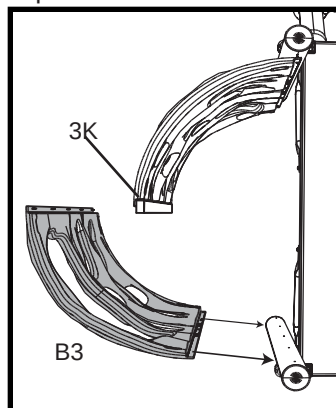

Parts for this Step are Located in Bag 3

Large Openings
Opposite




**NOTE: Mount the panels so that the
large openings are opposite.**

28

Secure the Climbing Wall Panel (B3) to the Climbing Wall Pole (3K) with the hardware shown.



*Two people
are required
for this step.*

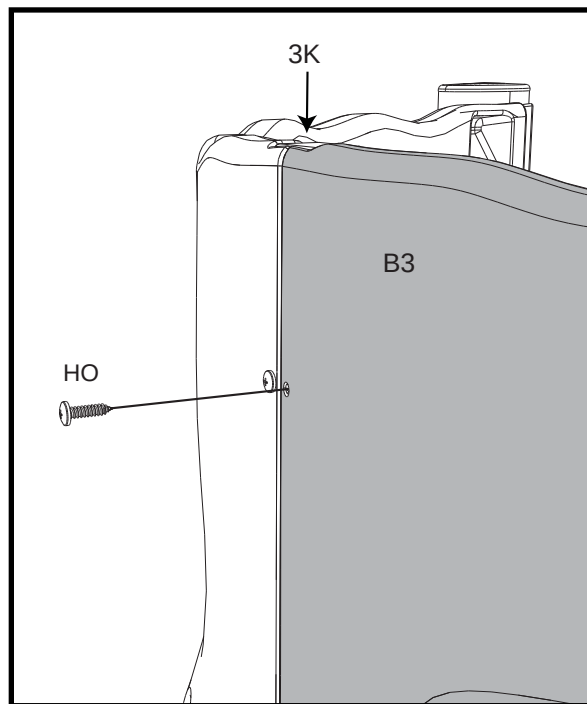
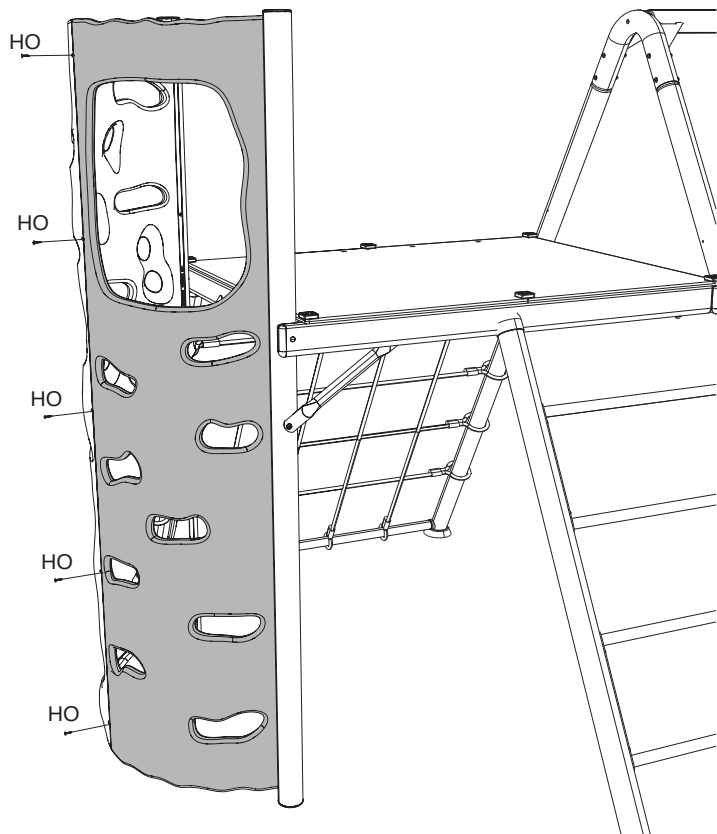



29

Secure the Climbing Wall Panel (B3) to the Left Vertical Pole (3H) with the hardware shown.



*Two people
are required
for this step.*

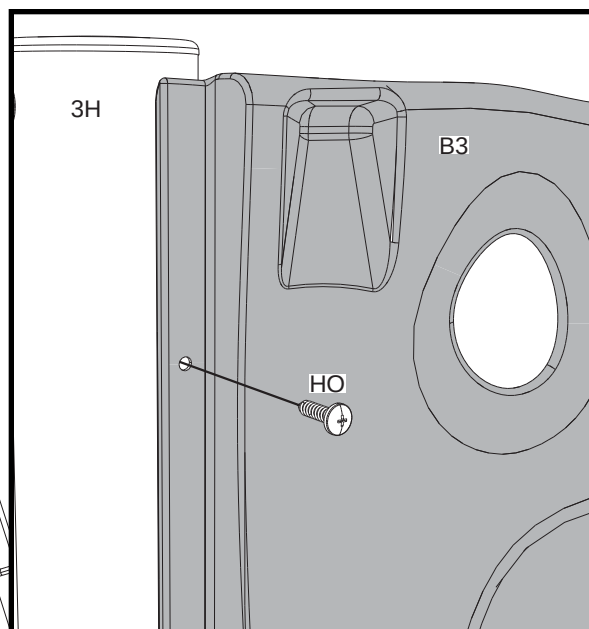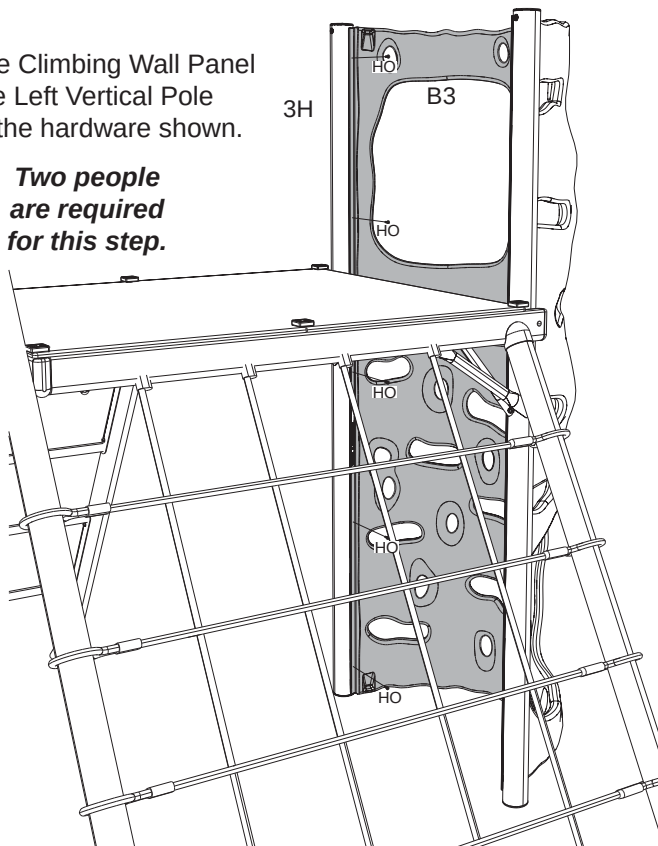





30

Place the Climbing Wall Roof Tube (3J) in the location shown, and secure it to the Right and Left Vertical Poles (3G, 3H) with the hardware shown.

Parts for this Step are Located in Box 3

HJ x 2

HD x 2

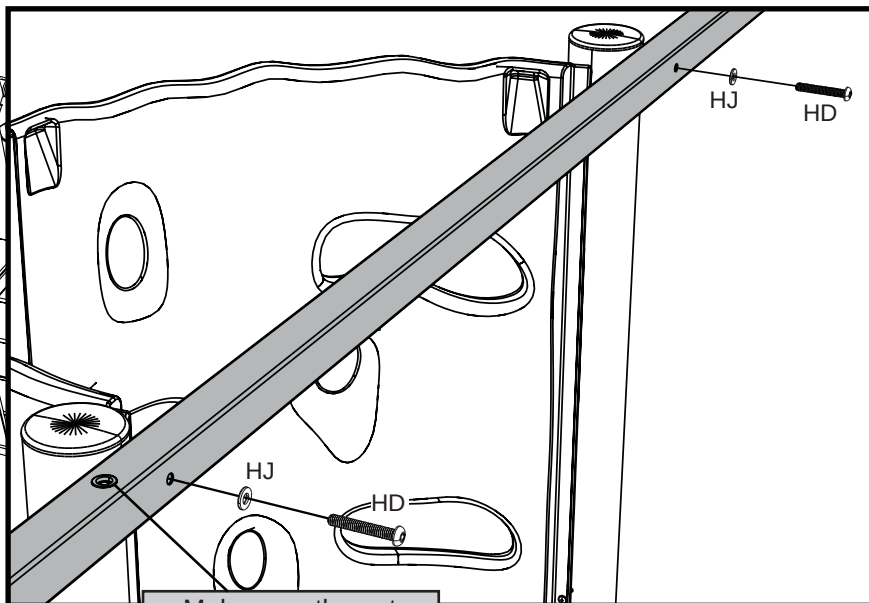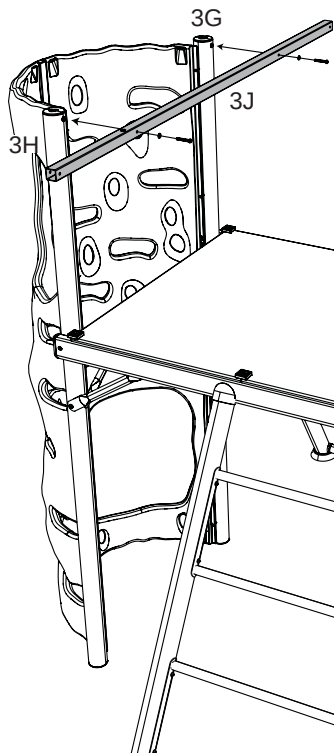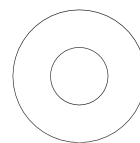

Make sure the nut insert is located in the orientation shown.





31

Place the A-Frame Roof Tube (3I) in the location shown, and secure it to the Swing Bar (B1) with the hardware shown.

Parts for this Step are Located in Box 3

HJ x 1


HD x 1

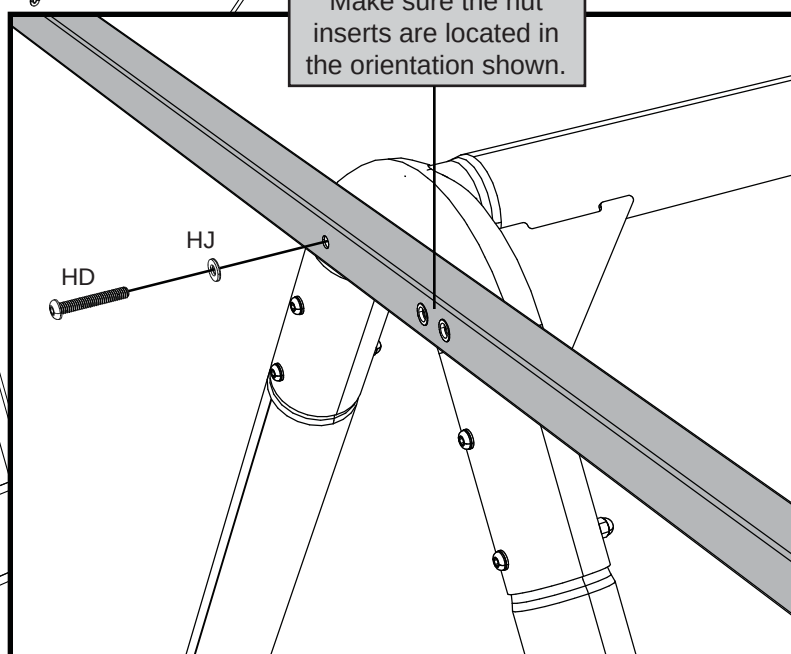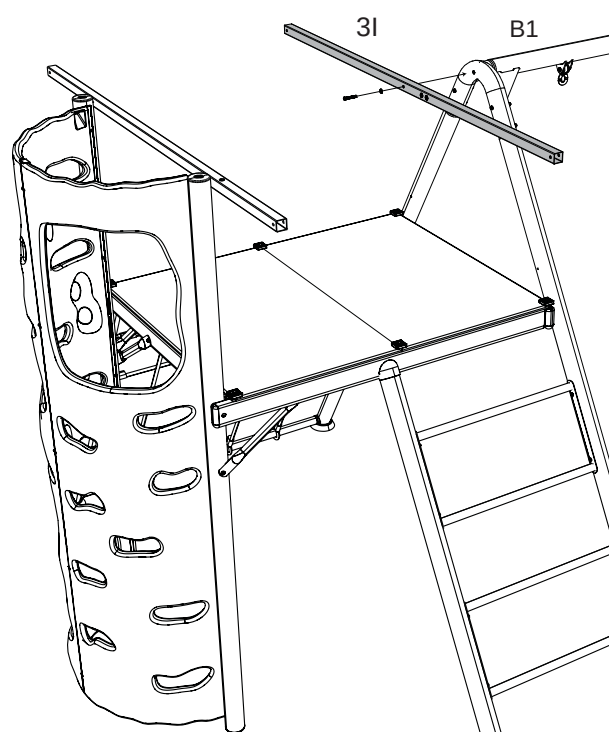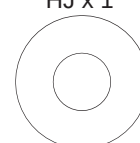



Make sure the nut inserts are located in the orientation shown.

32

Attach the One Handle Rails (1A) to the Clubhouse by placing the bottom of the rails over the 1 1/2" Square Caps with Holes (CE) as shown. Secure the top of the rails to the Climbing Wall and A-Frame Roof Tubes (3J, 3I).

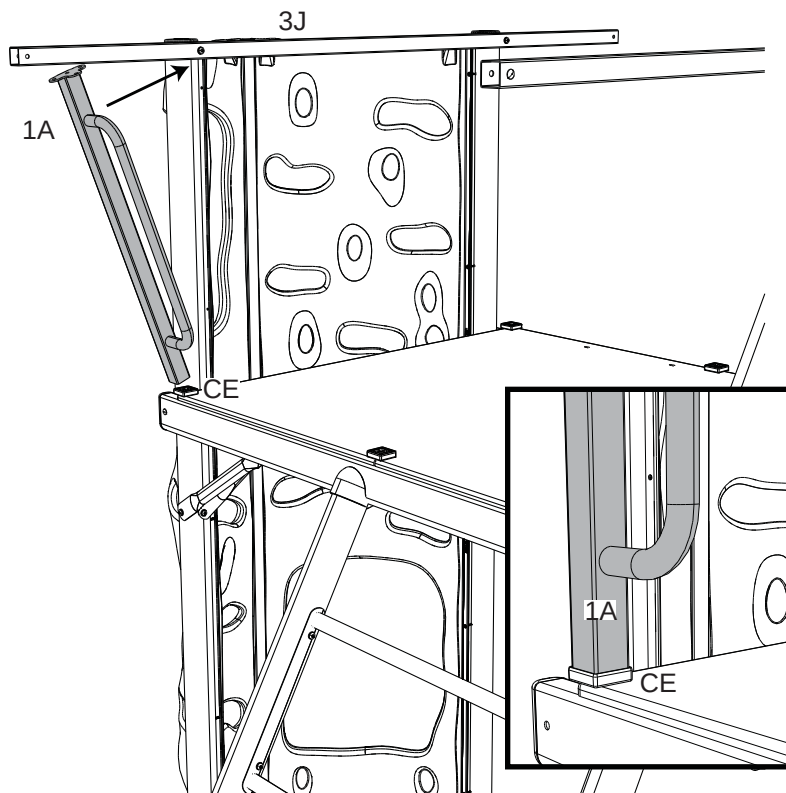


Parts for this Step are Located in Box 1

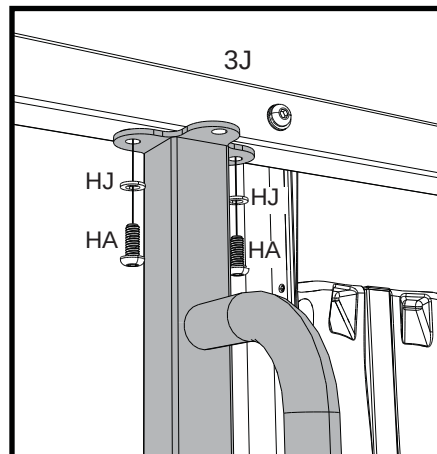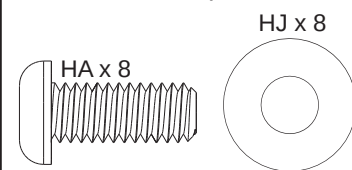


33



Place a Square Black Cap (CI) in each end of the Roof Railings (2K).



Parts for this Step are Located in Box 2

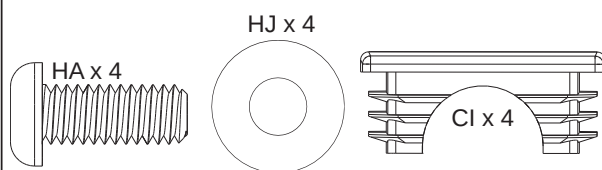




Place the Roof Railings (2K) over the One Handle Rails (1A) installed in the previous step, and secure it to the One Handle Rails as shown.

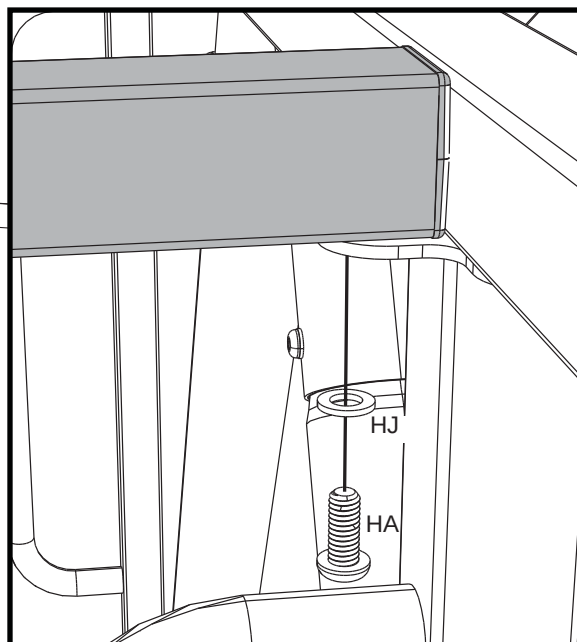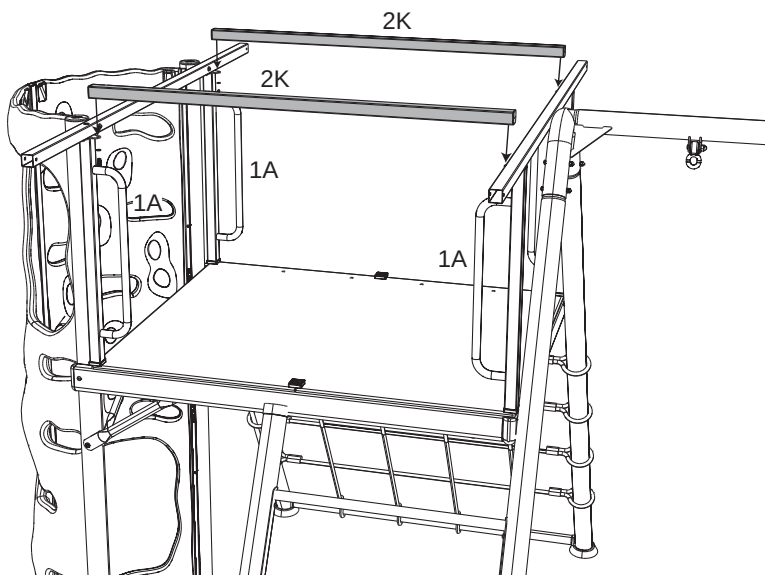

34

Attach the Two Handle Rails (1B) to the Clubhouse by placing the bottom of the Rails over the 1 1/2" Square Caps with Holes (CE) as shown. Secure the top of the rails to the Roof Railings (2K) with the hardware shown.






Parts for this Step are Located in Box 1

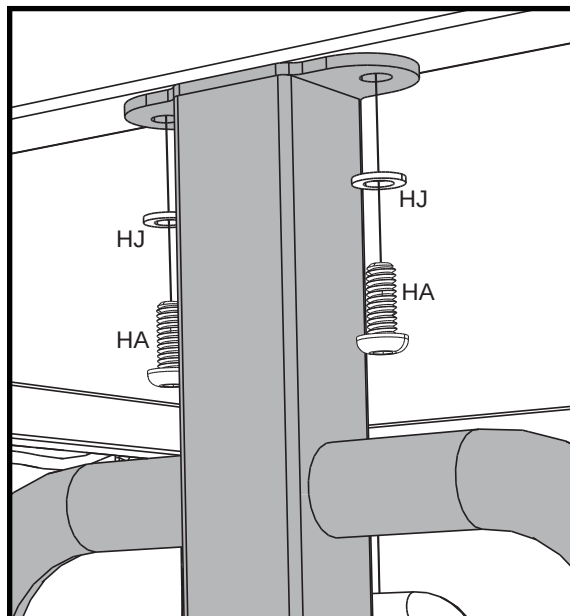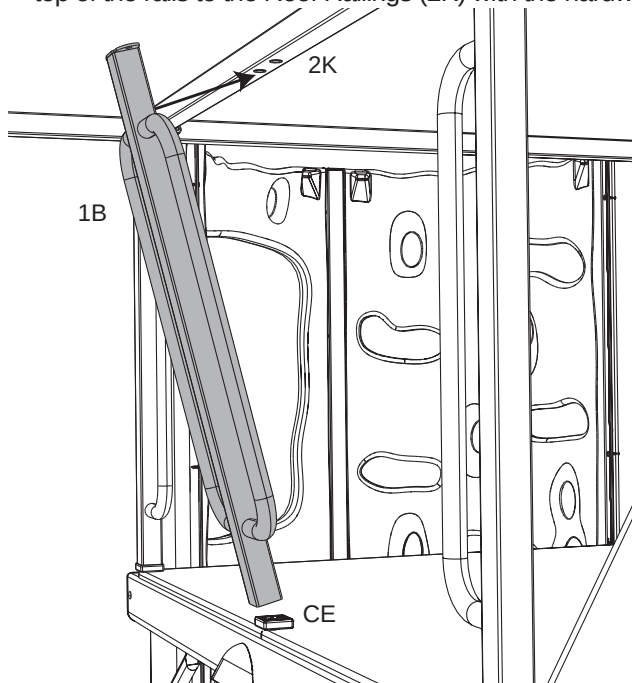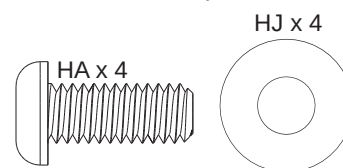

35

Secure the Round Roof Tubes (2J) to the A-Frame and Climbing Wall Roof Tubes (3I, 3J). Secure the Round Roof Tubes with the hardware shown using the Equal Length Allen Wrench (HT) as shown.

Parts for this Step are Located in Box 2

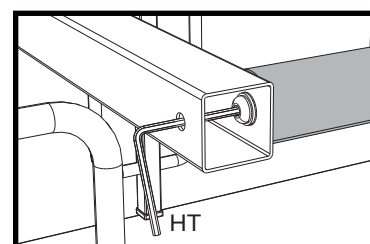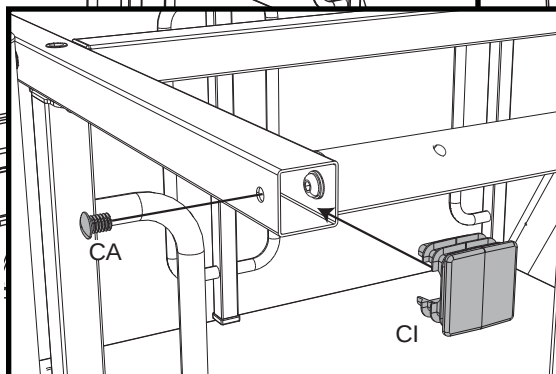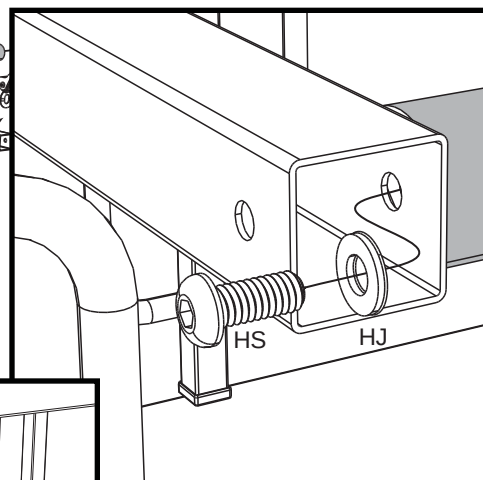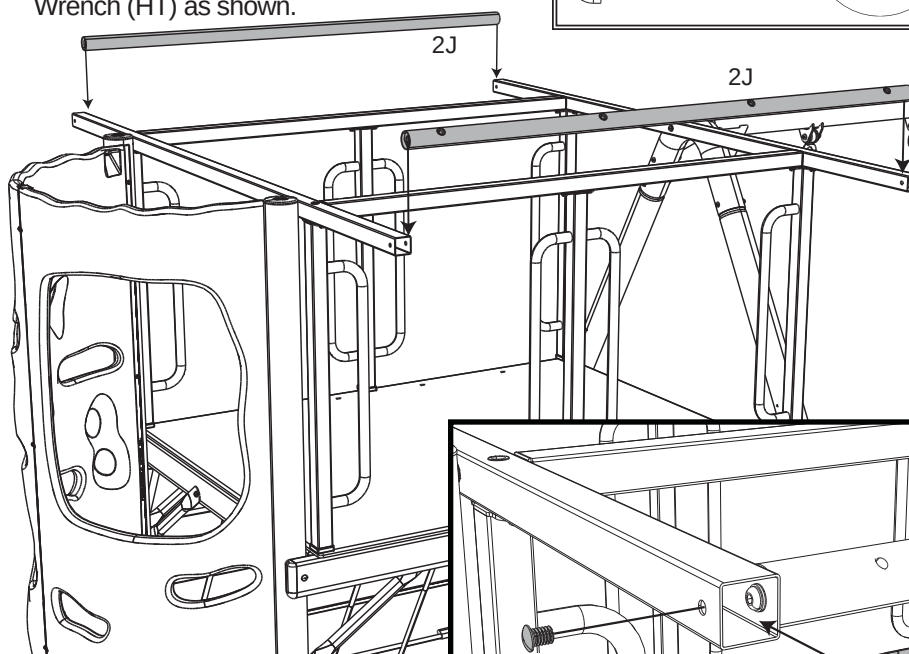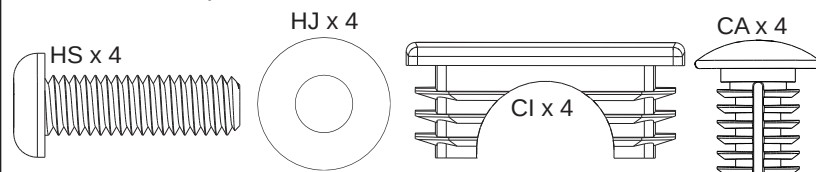

Place a Square Black Cap (CI) in each end of the Roof Tubes (2J), then place the Hole Caps (CA) in the locations shown.



36

Connect two Roof Trusses (2I) together as shown.

Repeat this step to connect the other six Trusses.



The holes in the trusses need to face up.

Parts for this Step are Located in Box 2

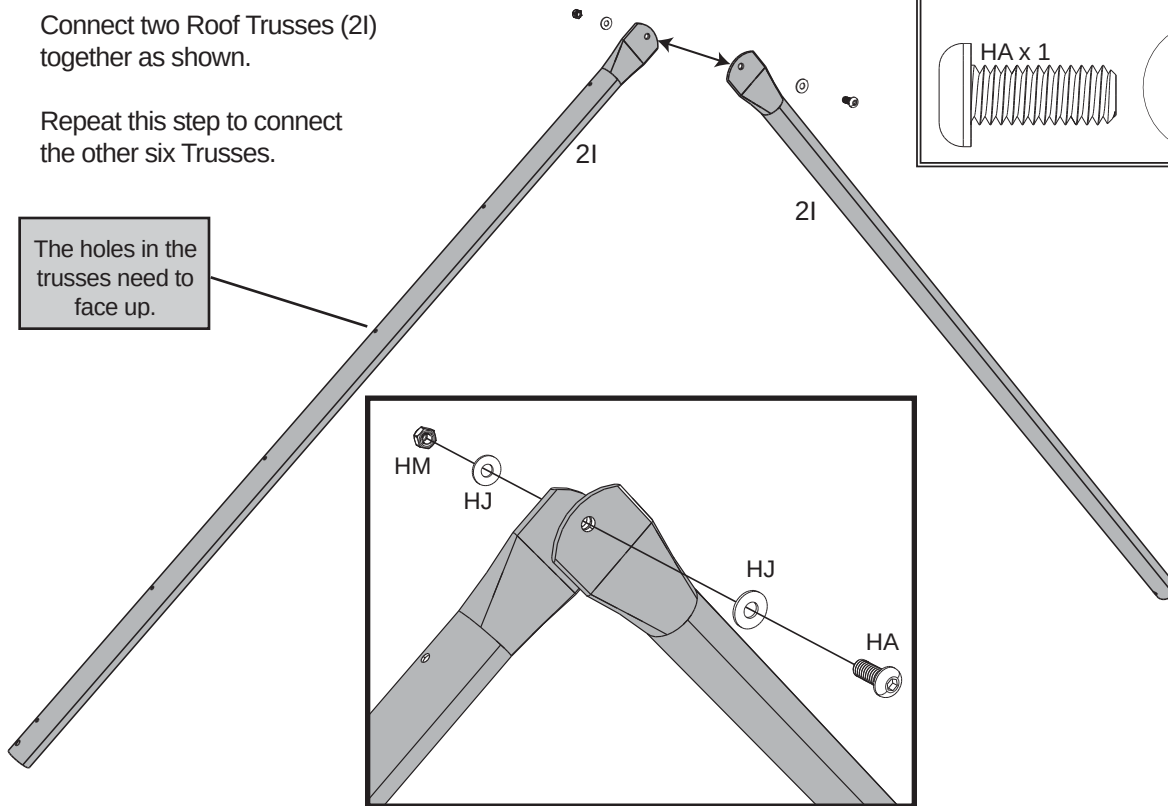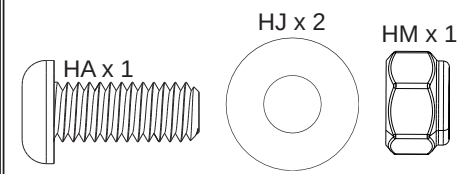

37


Place the Roof Trusses assembled in step 36 on the Round Roof Tubes (2J) as shown, and secure with the hardware shown using the Equal Length Allen Wrench (HT).

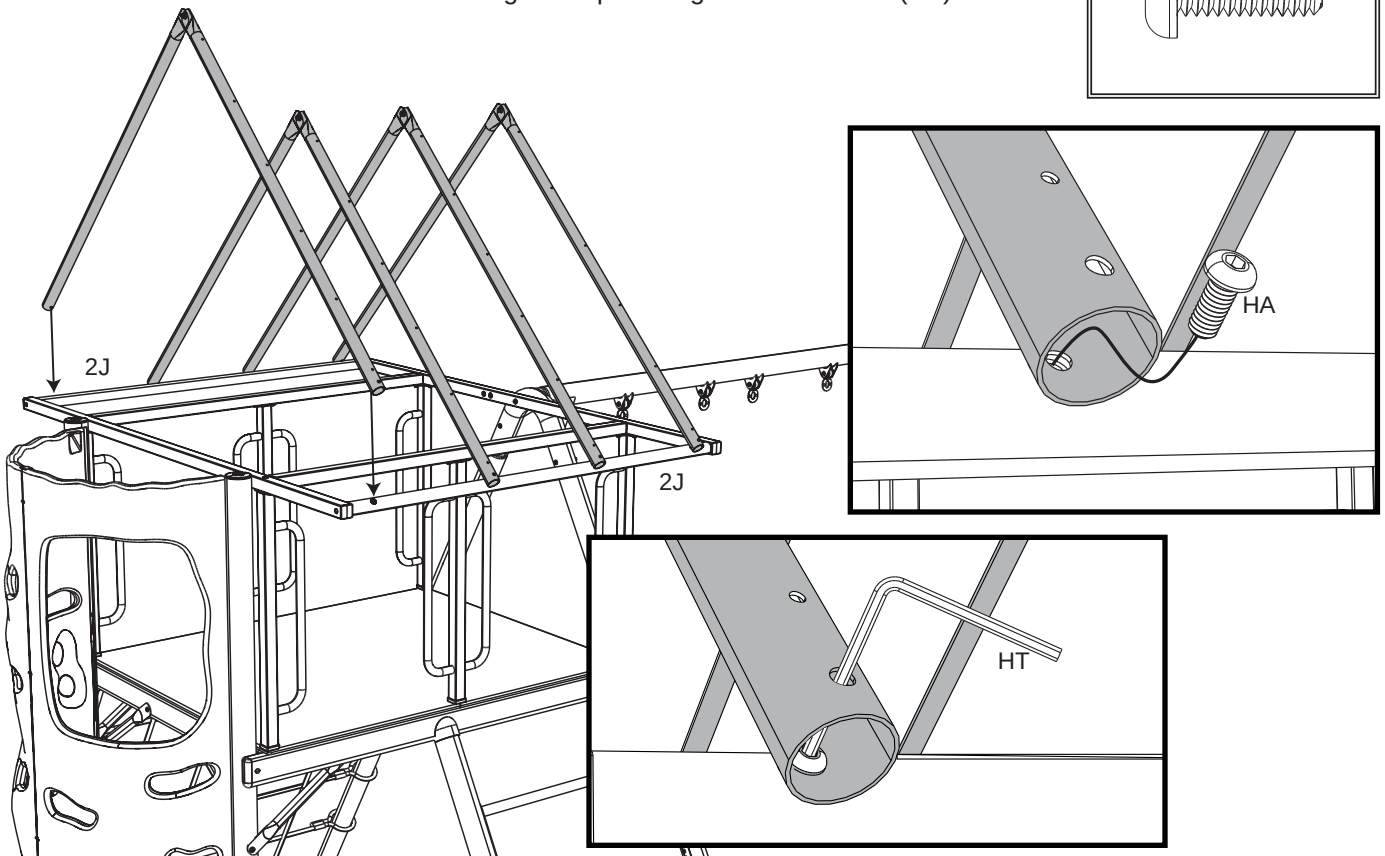






Attach the Roof Panels (4A) to the Roof Trusses, and secure the panels as shown. The notch at the top of the panel will line up with the top of the Trusses.

To prevent the Screws from going through the plastic, do not overtighten.

Parts for this Step are Located in Box 4




The Roof Panels (4A) placed on top need to have a notch as shown.

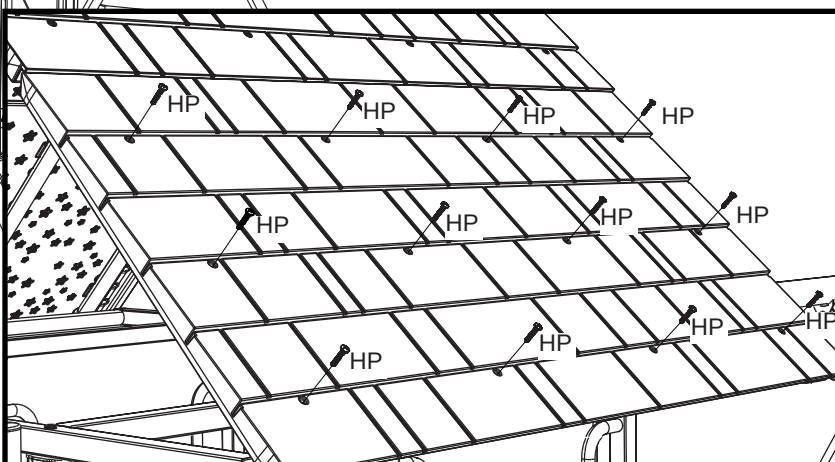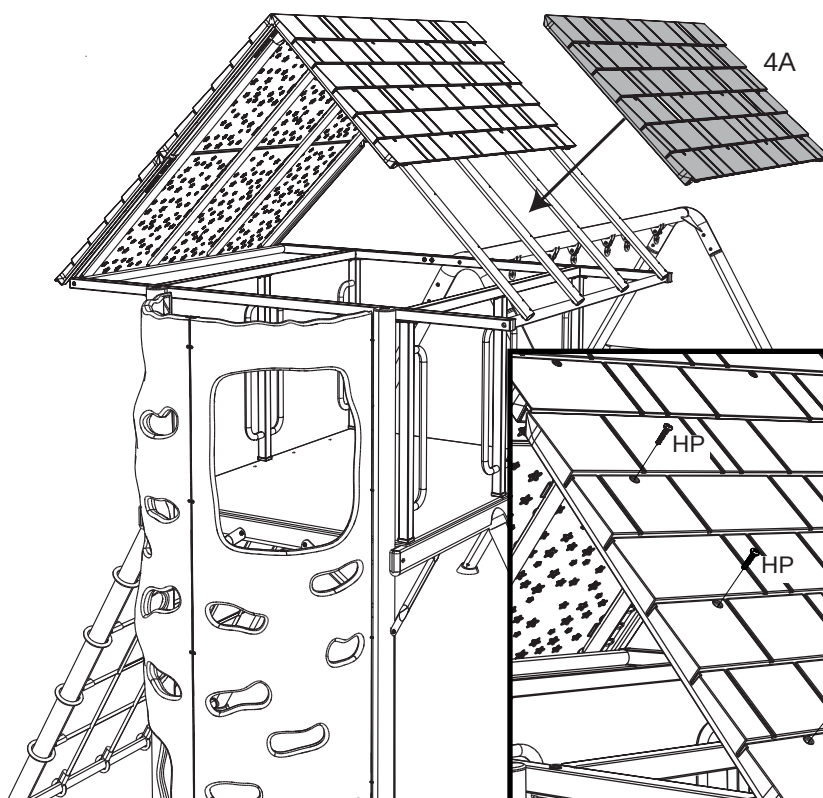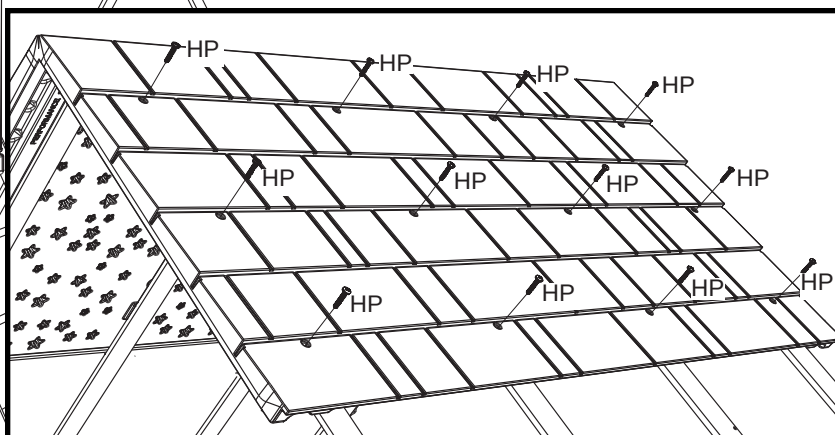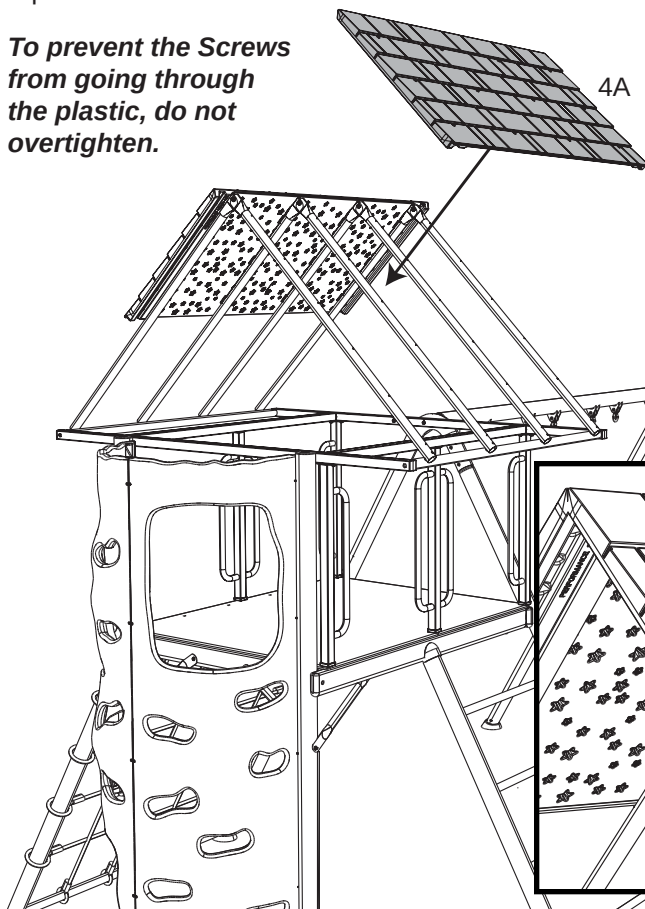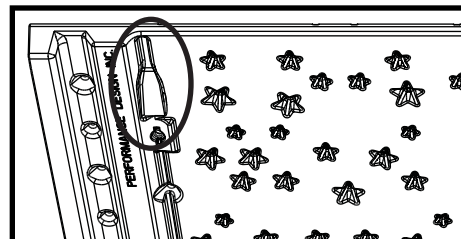

CAUTION
Exercise extreme caution while using a ladder for assembly. Follow all warnings and instructions provided by the ladder manufacturer.

39


Insert 1 1/2" Dome Caps (CC) into the ends of the Roof Trusses.

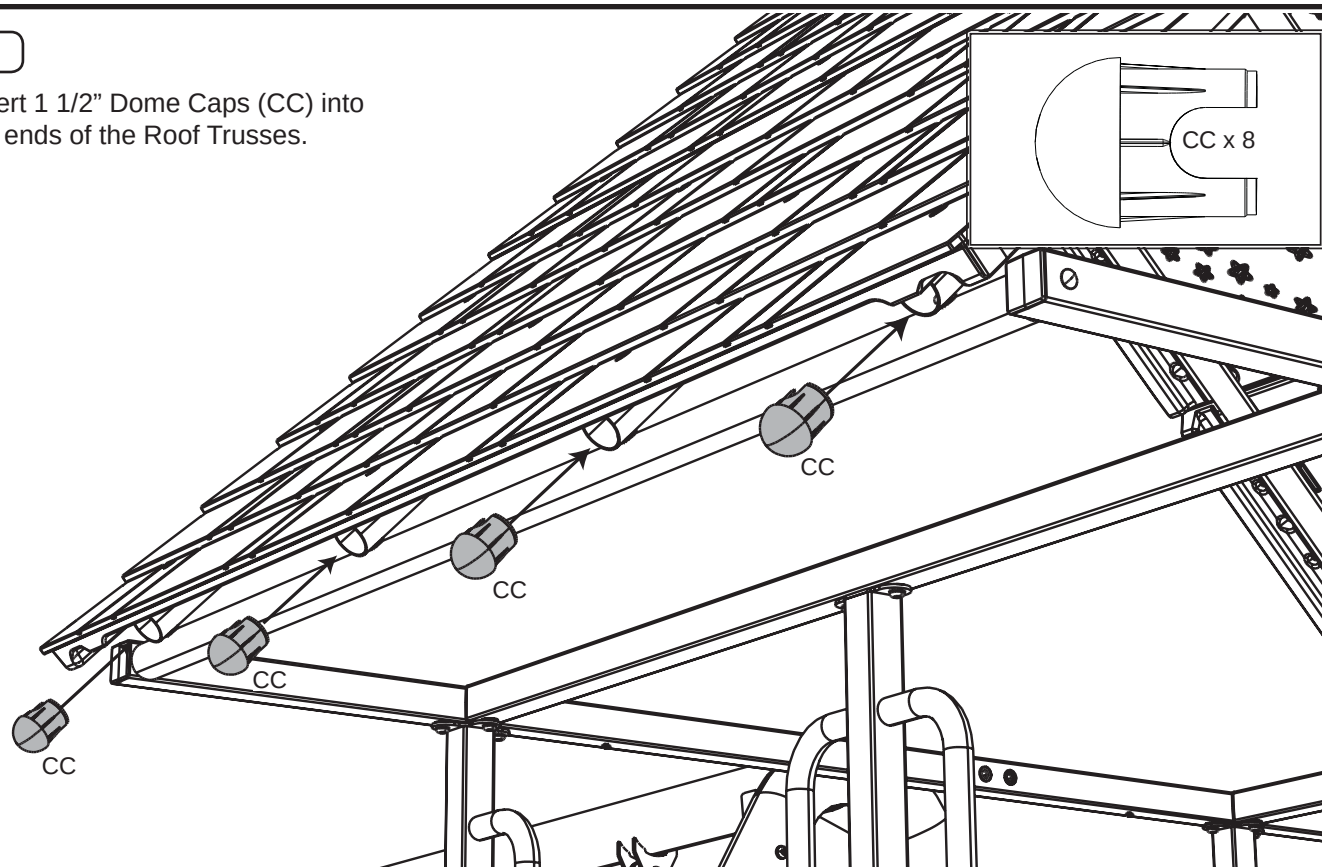

40

Parts for this Step are Located in Bag 2


Using a 3/8" Drill Bit (not included), drill 3/8" holes through the indentations in the top of the Slide (B2) as shown. Drill the holes directly downward.

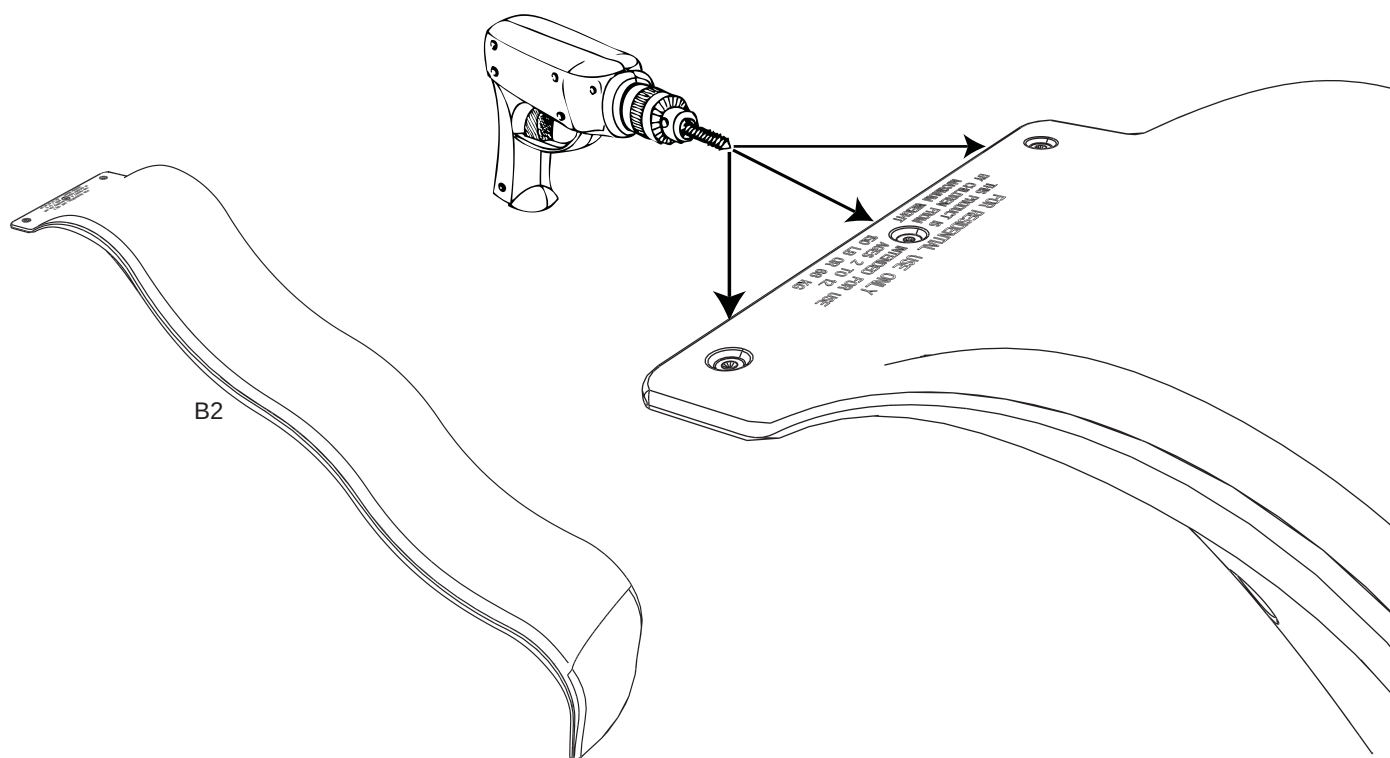

41

Note: If the deck does not have pre-drilled holes, complete this step.




Use a 3/8" Drill Bit to drill through the Deck (2A) in the Slide location.

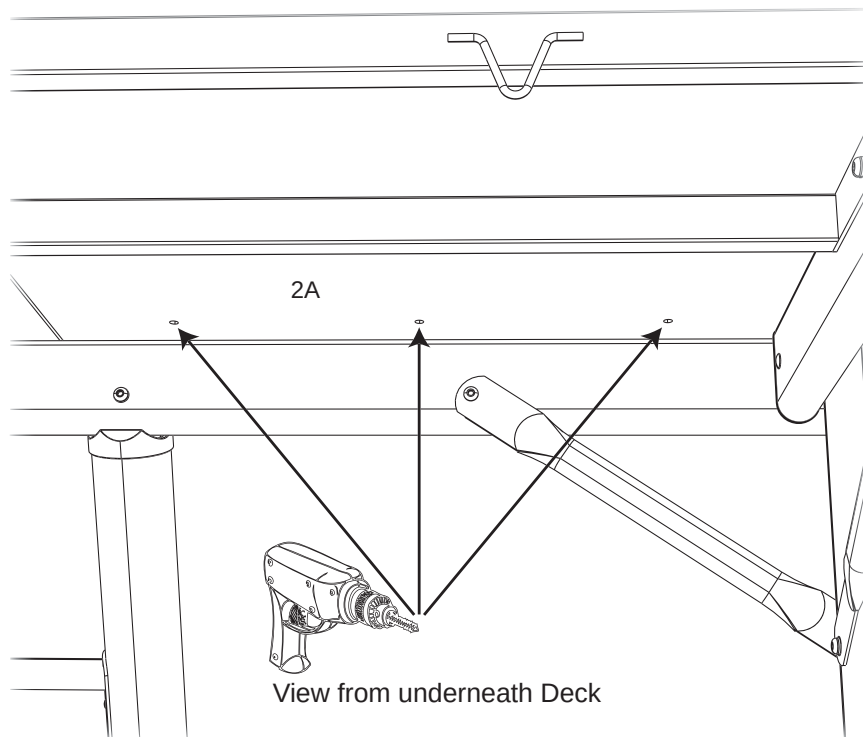

42



Place the Slide (B2) in the location shown, and attach it to the Deck (2A) with the hardware indicated.

Parts for this Step are Located in Bag 2

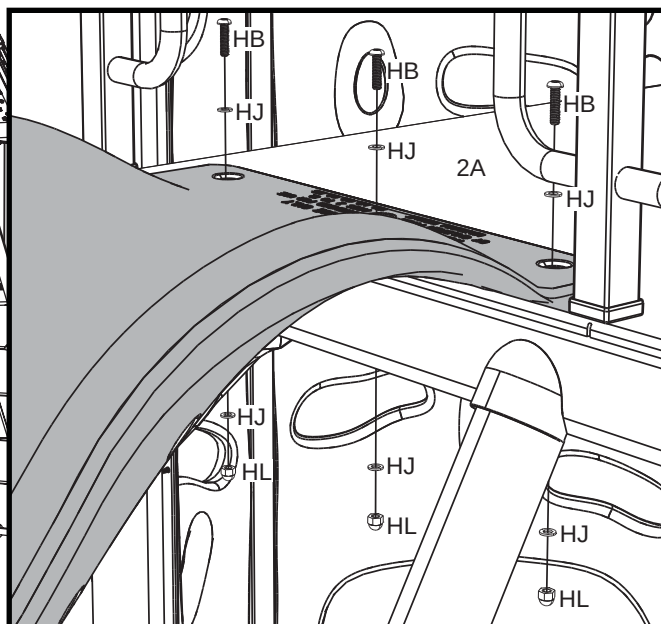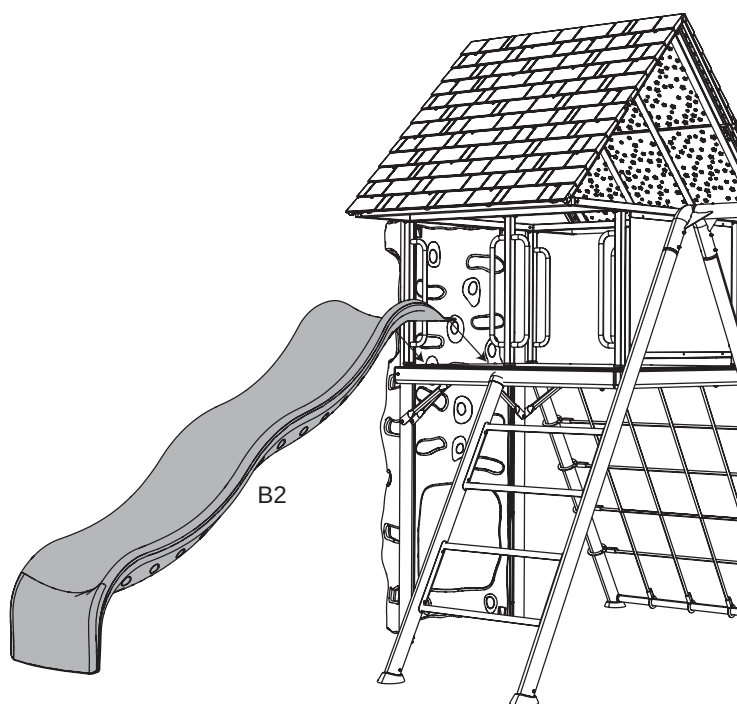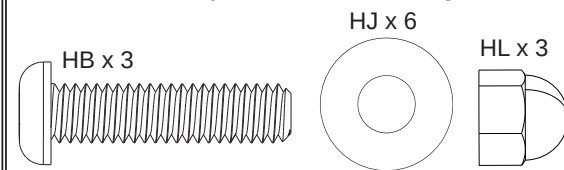



43

Place the Chalkboard (2B) between the Deck (2A) and the A-Frame Roof Tube (3I). Secure the bottom of the Chalkboard with two 1 1/4" Screws (HP). Make sure there are two Spacers (HK) between the Chalkboard and the Pole on each side.

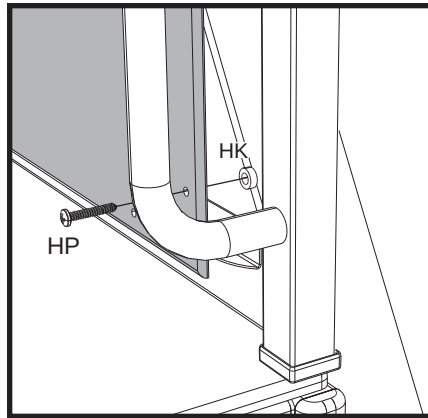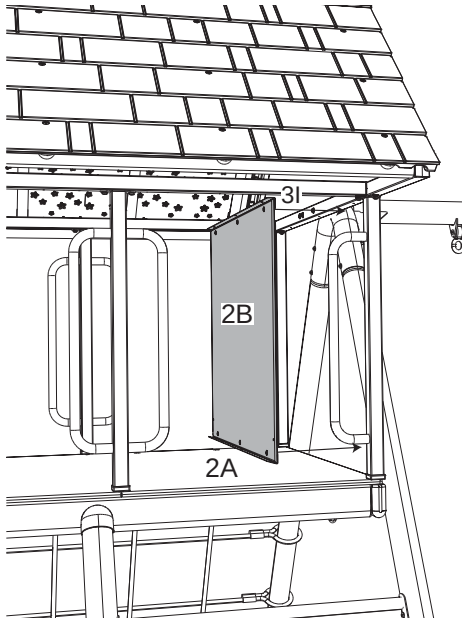

Bottom of Chalkboard--
complete for both sides

Parts for this Step are Located in Box 2

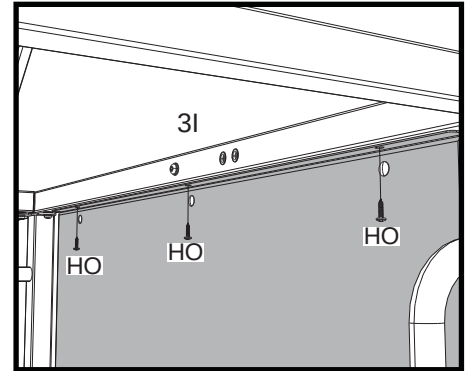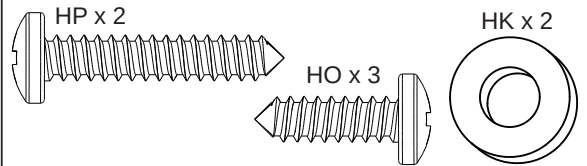




Attach the top of the Chalkboard
with three 3/4" Screws (HO).

44

Attach the Binocular Bracket (1H) to the Climbing Roof Tube (3J), and secure with the hardware shown.

Do not over tighten the hardware. The Binoculars will not be able to rotate.

Parts for this Step are Located in Box 1

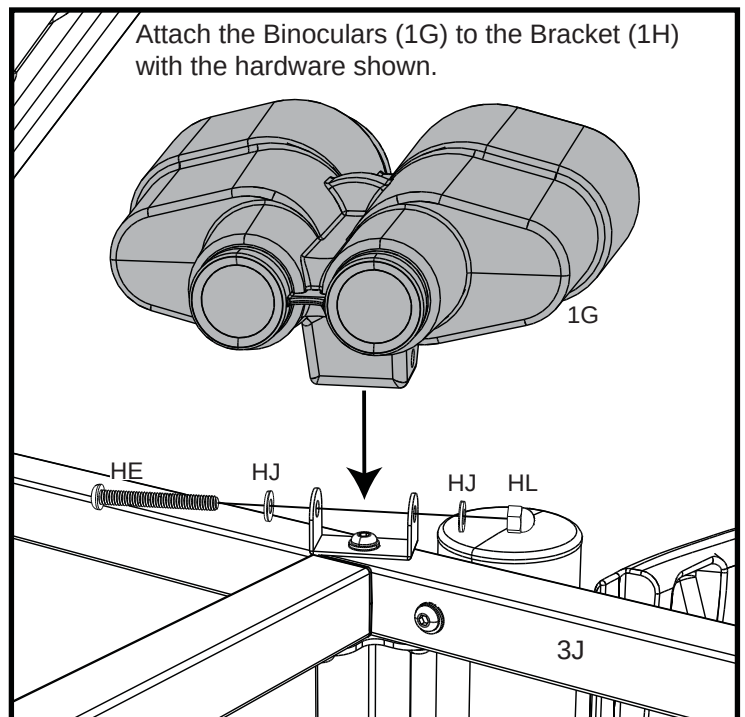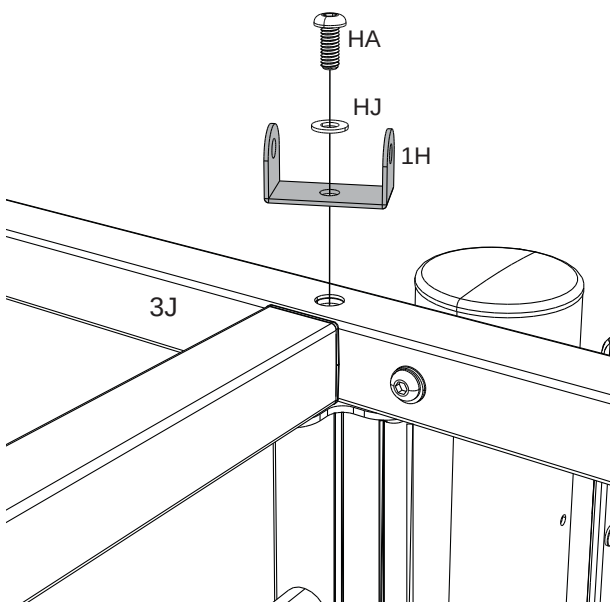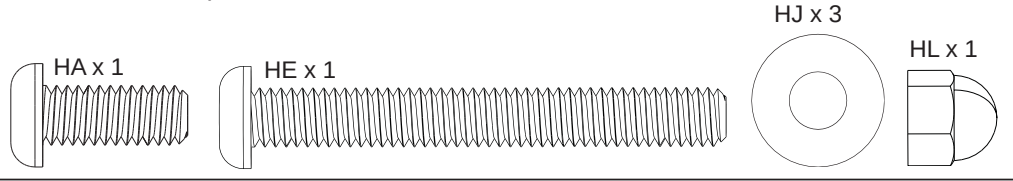

Attach the Binoculars (1G) to the Bracket (1H)
with the hardware shown.


45

Slide the Hex Bolt (HH) into the center hole of the Wheel Clicker (1J) as shown.

Parts for this Step are Located in Box 1

HH x 1

HC x 2

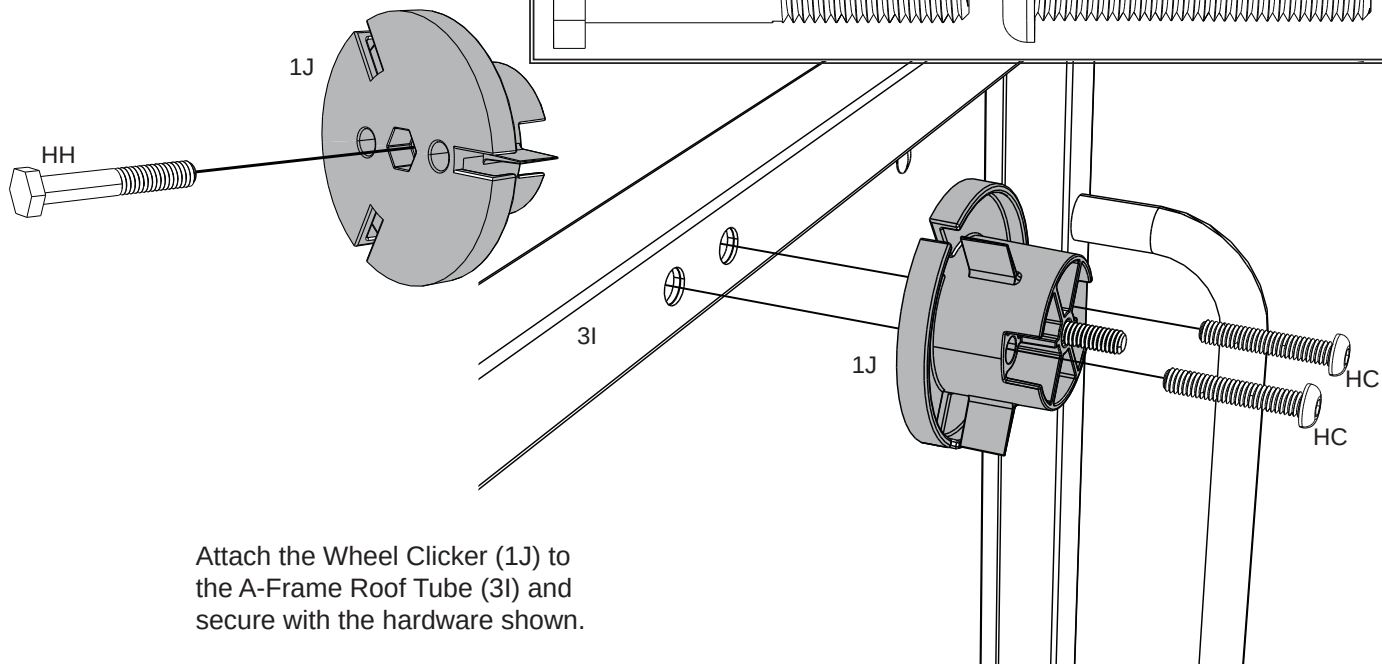


Attach the Wheel Clicker (1J) to the A-Frame Roof Tube (3I) and secure with the hardware shown.

46

Parts for this Step are Located in Box 1

HR x 1

HN x 1

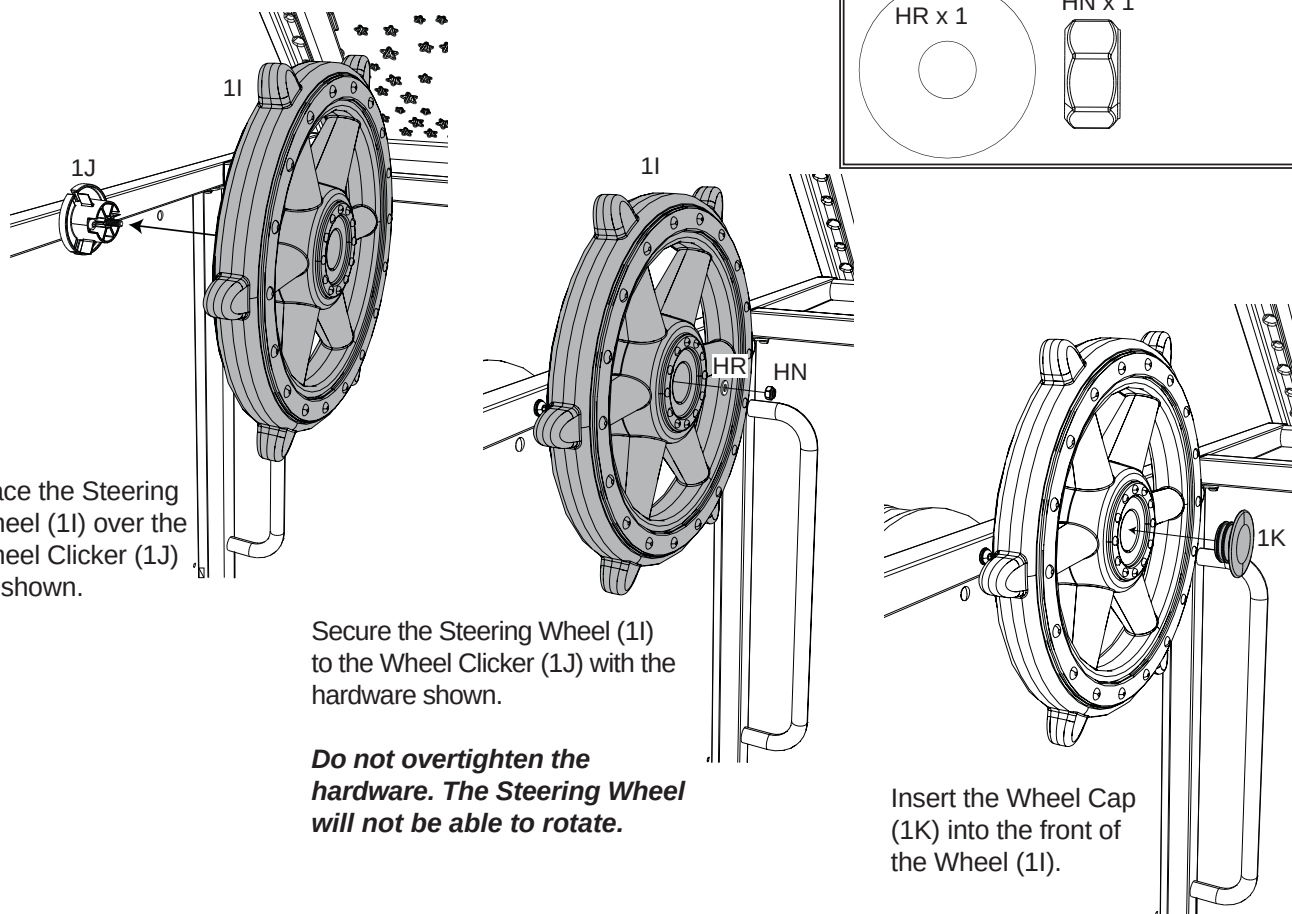

Place the Steering Wheel (1I) over the Wheel Clicker (1J) as shown.

Secure the Steering Wheel (1I) to the Wheel Clicker (1J) with the hardware shown.

Do not overtighten the hardware. The Steering Wheel will not be able to rotate.

Insert the Wheel Cap (1K) into the front of the Wheel (1I).



47

Place the Square Black Cap (CI) into each end of the Square Tubing (2N)

Place the Plastic Seat (2M) on top of the Square Tubing (2N) and secure with the hardware shown.

Repeat this step to assemble the two other Plastic Seats (2M) to the Square Tubings (2N).


Parts for this Step are Located in Box 2

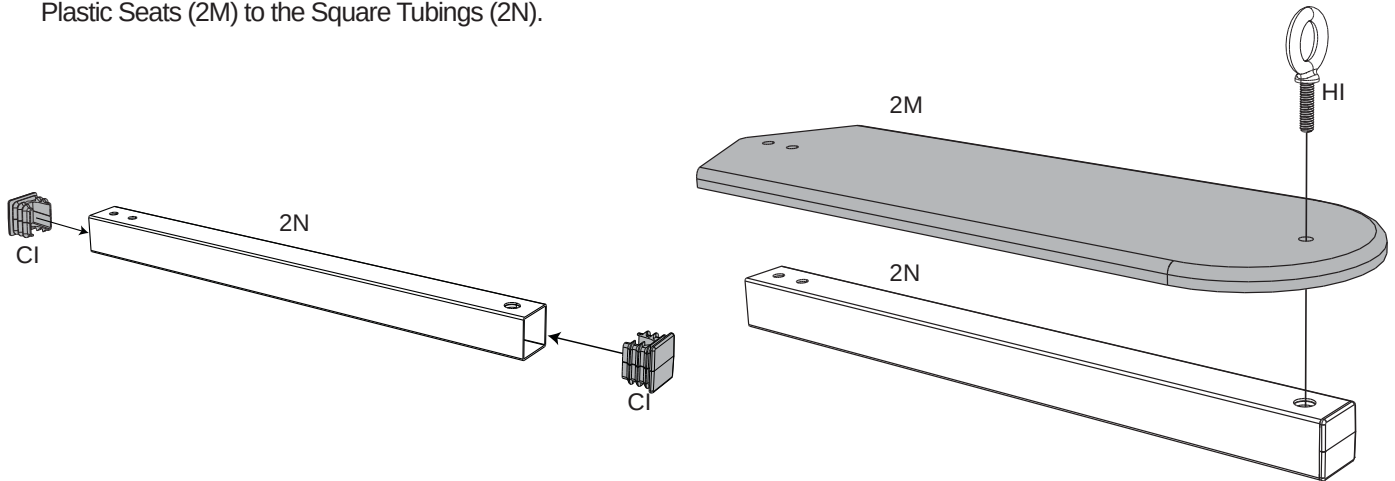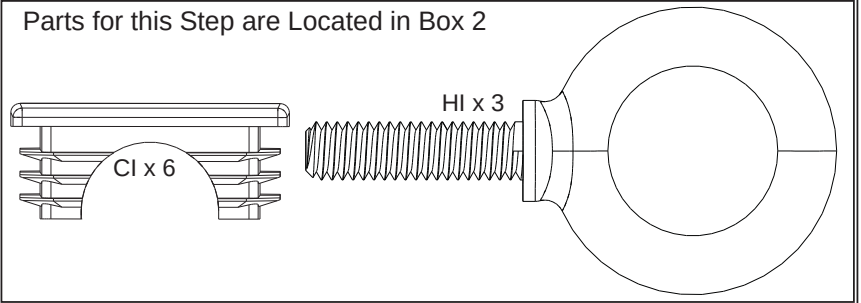


48

Bring the three assemblies completed in step 47 together.

Parts for this Step are Located in Box 2

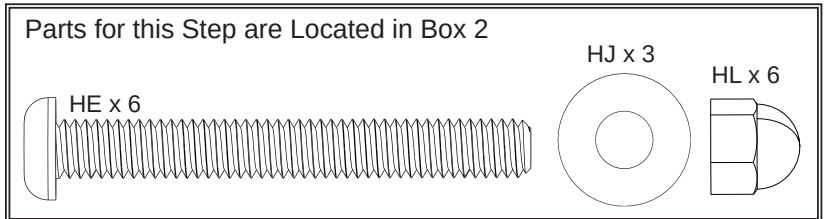


Secure the assemblies together using the 3- and 6-Hole Brackets (2O, 2P) and the hardware shown.

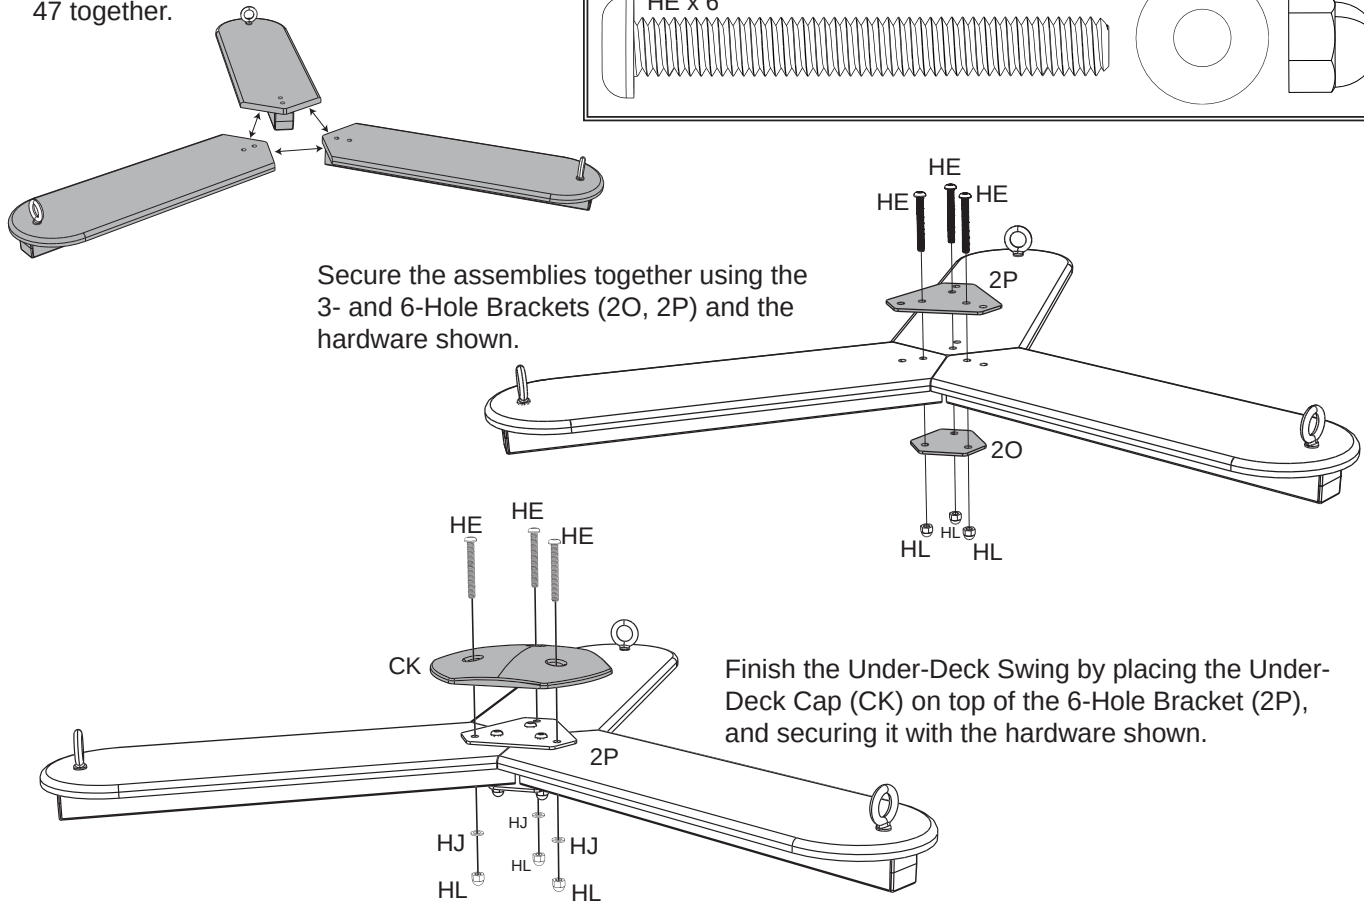


Finish the Under-Deck Swing by placing the Under-Deck Cap (CK) on top of the 6-Hole Bracket (2P), and securing it with the hardware shown.

49

Attach the Quick Links (HQ) to each end of the Soft Grip Chains (2Q). Attach the Soft Grip Chains (2Q) to the Under-Deck Swing.

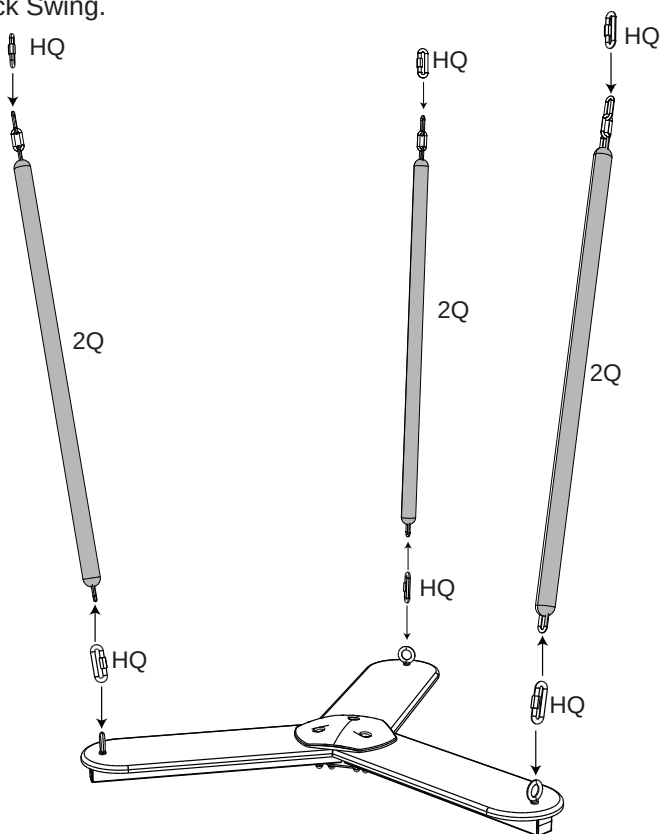



Parts for this Step are Located in Box 2

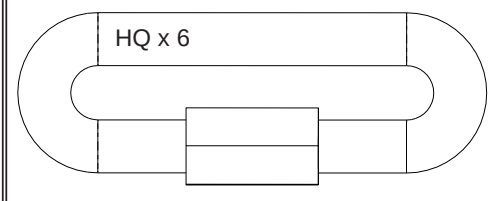


50

Attach the completed Under-Deck Swing to the hooks located under the Deck with the Quick Links (HQ) as shown.

Note: If the Under-Deck Swing is not level, adjust the links by attaching the second chain link to the Quick Link. Do this to the lowest part of the swing.

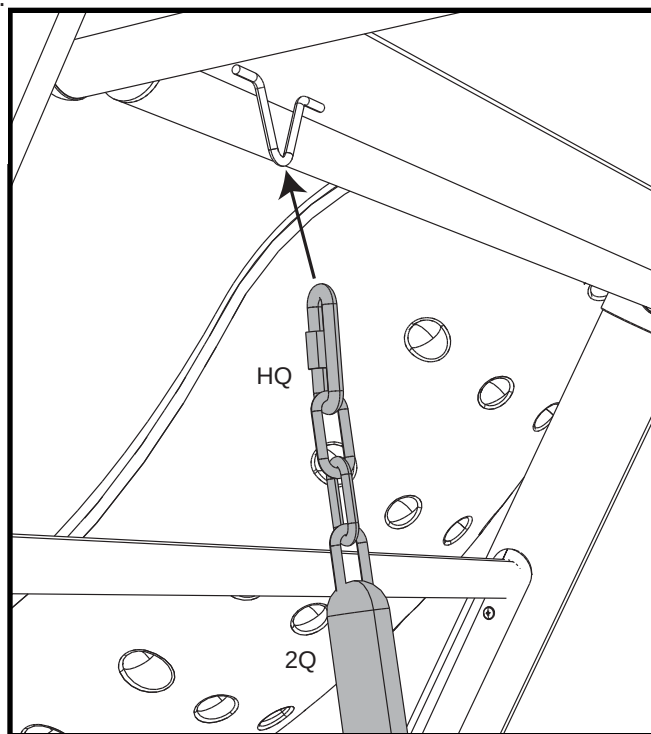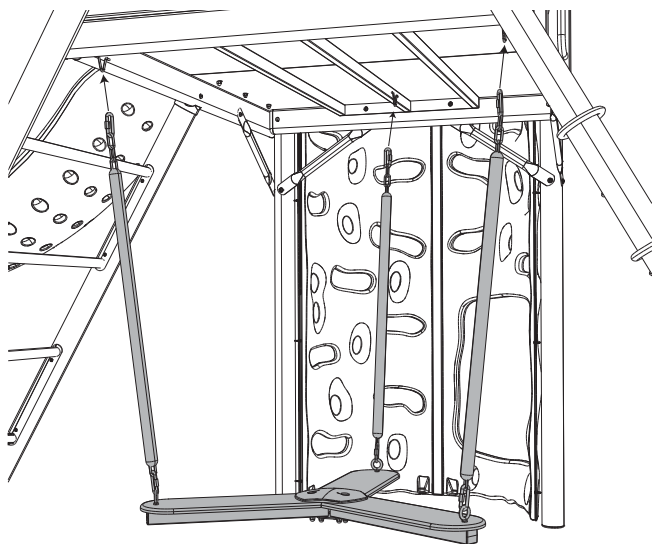

Attach the Swings (1D) and Trapeze (1E) to the Swing hardware already attach to the Swing Bar (B1).

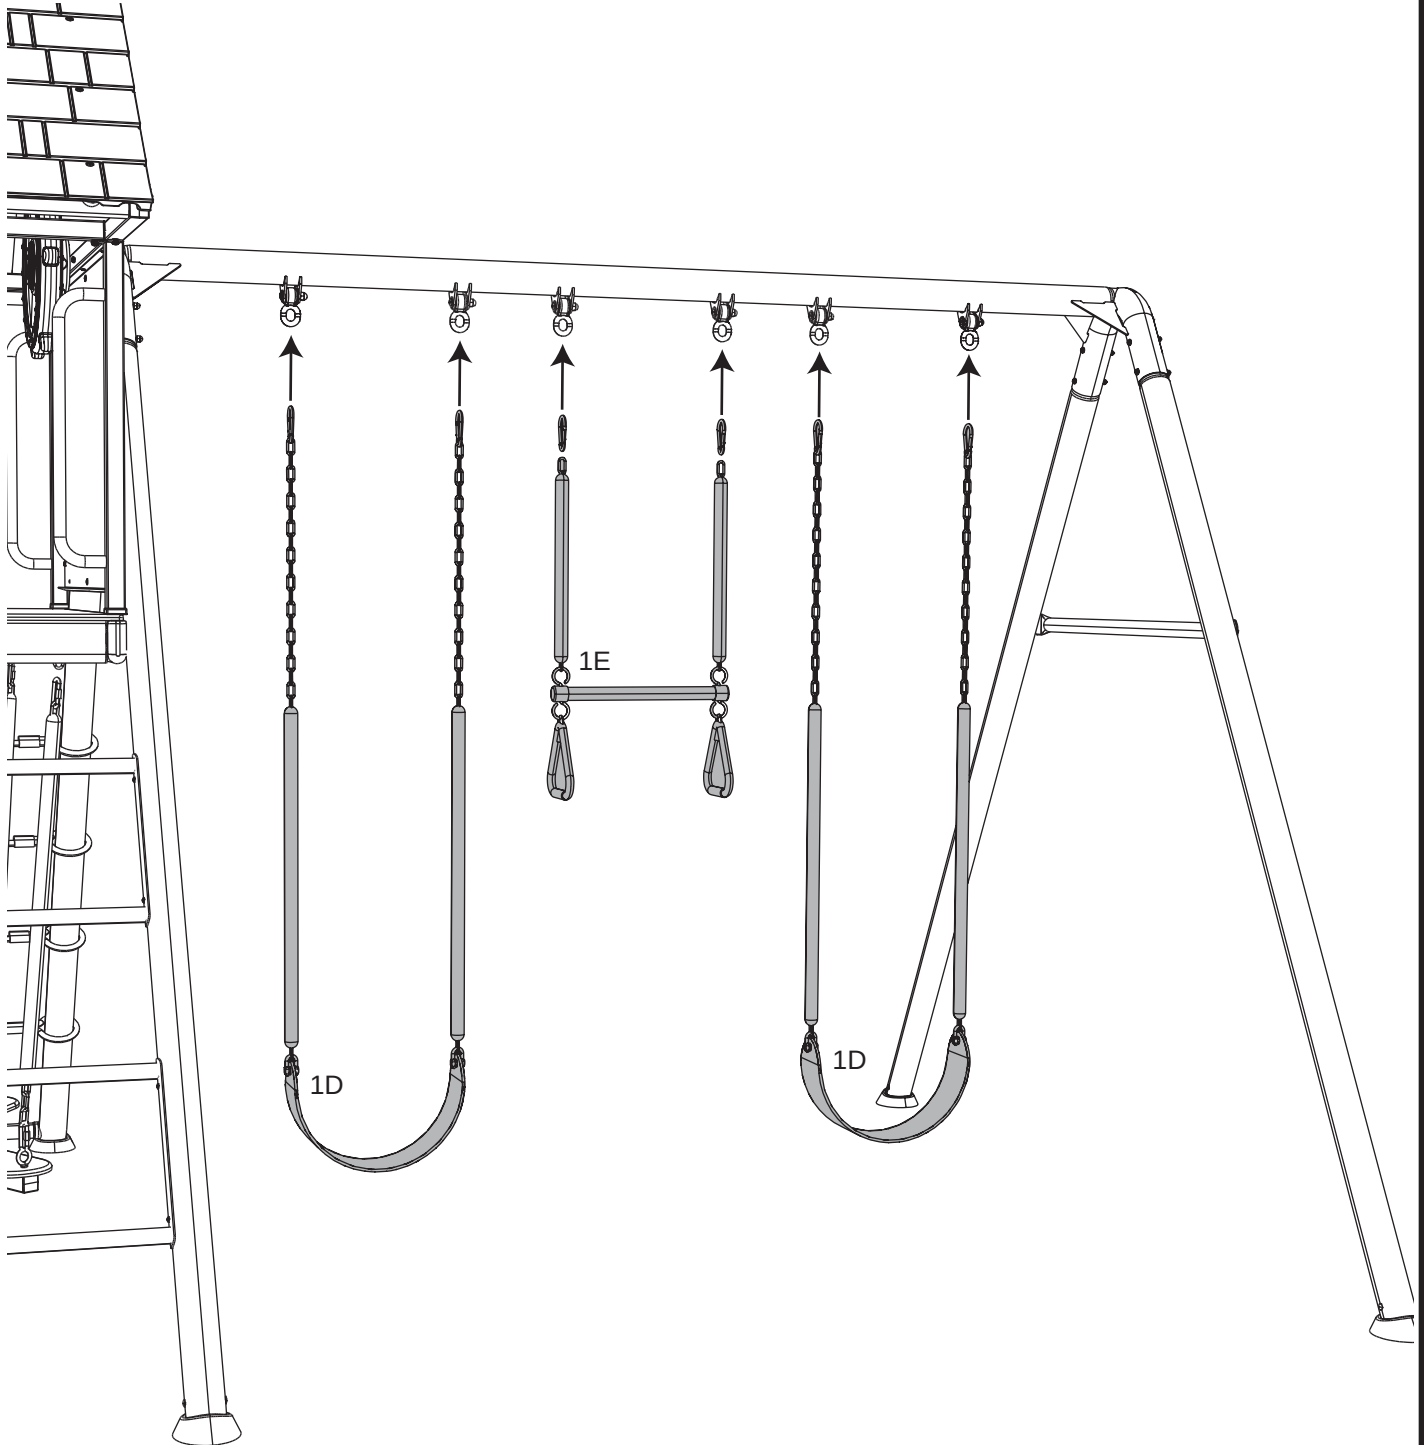

**If the warning sticker is illegible, destroyed or removed,
contact Customer Service for a replacement.**



WARNING



This product is intended for use by children ages 3 to 12, and is for residential use only. Do not install over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury.

Observing the following statements and warnings reduces the likelihood of serious or fatal injury:

- On-site adult supervision should be provided for children of all ages.
- Children should not walk close to, in front of, behind, or between moving items.
- Instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope.
- Instruct children to avoid swinging empty seats.
- Teach children to sit in the center of the swings with their full weight on the seats. Never stand, sit or kneel on the swing seat.

- Instruct children not to use the equipment in a manner other than intended.
- Instruct children not to get off equipment while it is in motion.
- To prevent entanglement and strangulation, dress children appropriately using well-fitting shoes and avoiding ponchos, scarves, jackets with neck drawstrings, helmets with straps, and other loose-fitting clothing that is potentially hazardous while using equipment.
- Instruct children not to climb when the equipment is wet.
- Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Make sure guardrails are in place at all times.



ADVERTENCIA



Este producto es para niños de 3 a 12 años de edad. Este producto es para uso residencial únicamente. No lo instale sobre concreto, asfalto, tierra empaquetada o cualquier otra superficie dura. La caída sobre una superficie dura podría ocasionar serias lesiones.

Si se presta atención a los siguientes enunciados y avisos de advertencia se reduce la probabilidad de producirse lesiones serias o mortales:

- Los niños de todas las edades deben estar bajo la supervisión de un adulto en el lugar.
- Los niños no deben caminar junto, en frente, detrás de o entre las piezas móviles.
- Indique a los niños no torcer las cadenas o sogas de los columpios ni pasarlas por encima de la barra de soporte superior, ya que puede reducirse la resistencia de las cadenas o sogas, según sea el caso.
- Indique a los niños que eviten impulsar columpios vacíos.
- Enseñe a los niños a sentarse en el centro de los columpios, con todo su peso en los asientos. Nunca deben pararse ni hincarse en el asiento del columpio.
- Indique a los niños no usar el equipo de ninguna forma diferente a la indicada.
- Indique a los niños no bajarse del equipo cuando esté en movimiento.
- Para evitar la posibilidad de que los niños se enreden y estrangulen, vístalos debidamente con zapatos debidamente ajustados y sin ponchos, bufandas, chamarras con cordones de apriete en el cuello, cascos con correas y otras ropas holgadas que puedan ser peligrosas al usar el equipo.
- Indique a los niños no subirse cuando esté húmedo el equipo.
- Indique a los niños no adherir al equipo de patio de juegos objetos no diseñados específicamente para éste, como cuerdas de saltar, cuerdas de tendedero de ropa, correas de mascotas, cables y cadenas, ya que podrían causar un peligro de estrangulación.
- Asegúrese de que los rieles protectores estén colocados en su lugar todo el tiempo.

**Lifetime Products, Inc
Clearfield, UT 84016**



AVERTISSEMENT



Ce produit est conçu pour un usage par des enfants âgés de 3 à 12 ans. Ce produit est réservé à un usage personnel seulement. Ne pas installer sur du béton, de l'asphalte, de la terre compactée ou toute autre surface dure. Une chute sur une surface dure peut entraîner des blessures graves.

L'observation des déclarations et des avertissements suivants réduit les risques de blessures graves ou fatales:

- La présence d'un adulte surveillant les enfants de tous âges doit être assurée.
- Veiller à ce que les enfants ne marchent pas près, devant, derrière ou entre les éléments en mouvement.
- Veiller à ce que les enfants ne tordent pas les chaînes ou cordes de la balançoire. De même, veiller à ce que les enfants ne bouclent pas les chaînes ou les cordes au-dessus de la barre de support supérieure, car cela pourrait en réduire leur solidité.
- Veiller à ce que les enfants ne balancent pas les sièges vides.
- Veiller à ce que les enfants s'assoient au centre des sièges de la balançoire, avec leur plein poids sur le siège. Veiller à ne jamais s'asseoir, s'agenouiller ou se tenir debout sur le siège.
- Veiller à ce que les enfants n'utilisent pas l'équipement à d'autres fins que pour l'usage prévu.
- Veiller à ce que les enfants ne descendent pas de l'équipement lorsqu'il est encore en mouvement.
- Pour éviter l'emmêlement des cordes et des chaînes et ainsi éviter tout risque d'étranglement, veiller à habiller les enfants correctement. Utiliser des souliers bien adaptés. Ne pas mettre des ponchos, foulards, blousons avec des cordons près du cou, casques avec des sangles et tout autre vêtement ample pouvant potentiellement s'avérer dangereux lors de l'utilisation de l'équipement.
- Veiller à ce que les enfants ne grimpent pas sur l'équipement quand celui-ci est mouillé.
- Veiller à ne pas attacher d'objets sur l'équipement de jeu non spécifiquement conçus pour cet équipement, tels que, mais sans s'y limiter, cordes à sauter, cordes à linge, laisses d'animaux, câbles et chaînes. Ceux-ci posent un risque d'étranglement.
- S'assurer que des garde-fous sont en place en tout temps.

www.lifetime.com

1/05/2009

1049933